

# USER GUIDE for SATR CODE V1.6a+



# By Peter & Nicole Lander

This is the A to Z guide of how to use the SATR (Small Arms Transmitter Receiver) system by Battlefield Sports for version SATR code version 1.6a and later. User Guide version 1.6.2

# **Battlefield Sports © 2013**

Unit 1/6 Graham Street Underwood, Brisbane Old Australia

support@BattefieldSports.com

Battlefield Sports.com

Version 1.6a Code

### **FCC Compliance**



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **CE Compliance**



# Contents

	1.1	Quick Stat (unlocked mode)	6
	1.2	Quick Start (LOCKED MODE)	6
	1.3	Quick Start: Gaming Gun Settings	6
	1.4	In-Game Functions	8
	1.5	Reading the Display	8
	1.6	The statistics explained	11
	1.6	.1 The Display Screen Basics (Laser Tag Theme)	12
2	SAT	TR System – An Overview	13
	2.1	Key SATR Features	13
	2.2	Factory Default Settings	13
	2.3	Backward Compatibility	14
	2.4	Master Controller Mode	14
3	SAT	TR – Standard Playing Unit	18
	3.1	On Boot Test	18
	3.2	Boot Sequence	18
	3.3	Menu Scroll and Select	18
	3.4	Reload (left/red) Button Menus	19
	3.5	Mode (RIGHT/black) Button Menus	21
	3.6	Standard Playing Mode	28
	3.6	.1 Count Down/Save Configuration	28
	3.6	.2 Ready	28
	3.6	.3 Firing	29
	3.6	.4 Reload	30
	3.6	.5 Right Button	30
	3.6	.6 Hit State	30
	3.6	.7 Dead/Deactivate State	31
	3.6	.8 Pause	31
	3.6	.9 Resume	31
	3.6	.10 Game Over	31
	3.6	.11 Game Start	32
	3.7	Master Controller Mode	32
	3.7	.1 Spawn/Reactivate Mode (IR)	33
	3.7	.2 Reload/Charge Mode (IR)	33
	3.7	.3 Pause Mode (IR)	34

3.7.	4	Resume Mode (IR)	. 34
3.7.	5	Target Reset (IR)	. 34
3.7.	6	Kill/Deactivate (IR)	. 35
3.7.	7	New Mission (IR)	. 35
3.7.	8	Set Volume	. 36
3.7.	9	Jam Weapon (IR)	. 36
3.7.	10	Sensor Test (IR)	. 36
3.7.	11	Shoot/Tag (IR)	. 36
3.7.	12	Pause (Radio)	. 37
3.7.	13	Resume (Radio)	. 37
3.7.	14	Start Game (Radio)	. 37
3.7.	15	End Game (Radio)	. 37
3.7.	16	Clr Stats (Radio)	. 38
3.7.	17	Interrogate IR	. 38
3.7.	18	Set Health	. 38
3.7.	19	Set Difficulty	. 38
3.7.	20	Set Game Timer	. 39
3.7.	21	Set Battle	. 39
3.7.	22	Set Team	. 39
3.7.	23	Chg Weapons (IR)/Chg Phasers (IR)	. 39
3.7.	24	Set Weapons/Set Phasers	. 40
3.8	Ма	ster Controllers in Hire Mode	. 40
3.9	Bat	tle Box (Medic Box)	. 40
3.9.	1	Medic Box in Hire Mode	. 41
3.10	Do	mination Box	. 41
APF	PENE	DIX – SATR Weapon Emulation Chart	. 42
1.1	GU	N CLASS #1 - Handguns	. 42
1.2	GU	N CLASS #2 - Sub Machine Guns	. 45
1.3	GU	N CLASS #3 - Rifles	. 50
1.4	GU	N CLASS #4 - Machine Guns	. 57
Apı	pen	dix - Recommend Weapon Emulations by Model	. 62
5.1	Qu	ick Emulation Setup	. 62
APF	PENE	DIX – Wounds Chart	. 63
TRC	DUBL	E SHOOTING	. 69

5


6 7

	7.1	A Gaming Gun will not hit another one! (BATTLE/GAME)	. 69
	7.2	A Gaming Gun will not hit another one! (FRIENDLY FIRE OFF)	. 69
	7.3	A Gaming Gun will not hit another one! (FLAT BATTERY)	. 70
	7.4	A Gaming Gun will not hit another one! (DON'T KNOW WHY!)	. 70
	7.5	What are the recommended range settings?	. 71
	7.6	How do I zero my Gaming Gun?	. 72
	7.7	Common Error Codes	. 72
8	Glo	ossary	. 73
9	Las	er Tag Terminology	. 73
1(	) WE	EE Regulations & Recycling	. 75

# **SATR Quick Start**

### 1.1 Quick Stat (unlocked mode)

- To switch the gaming gun on, turn the key ¼ TURN clockwise.
- The sensors are mounted on a headband. The headband goes over a bandana or hat. The headwear tells the teams.
- Once the gaming gun is on, pull trigger to commence the countdown. It takes a couple of seconds for the gaming gun to boot.

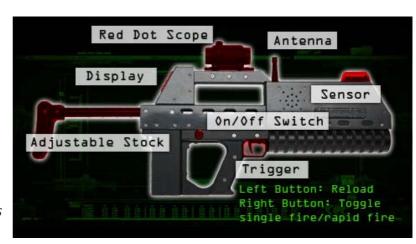

- After a few seconds your gaming guns is ready to go.
- Take the key out to play.
- Aim at the head sensors or the gun barrel sensor.
- Reload ammo by pushing left button once and let go (do not hold down).
- When you are finished turn the gun off using the key (turn ¼ anti-clockwise).

# 1.2 Quick Start (LOCKED MODE)

- To switch your phaser on, turn the key ¼ TURN clockwise. The phaser will start automatically
- The phasers are pre-set, so the blue team can ONLY tag the red team. (The blue team CANNOT tag the other blue team members. Likewise red team cannot tag others on the red team.)
- To play: Aim at the headbands or the barrel (that's where the sensors are). Each time a player tags an opponent; your phaser says "tagged". Number of tags is shown on your display after the letter T.
- The phaser will automatically reload once all your ammo is used up in that clip.


# 1.3 Quick Start: Gaming Gun Settings

### **BOOT TO LAST CONFIGURATION**

A gaming gun remembers its setting between boots. After turning the gaming gun on, wait a couple of seconds and then pull the trigger. Then you are ready to play!

### **BATTLE GROUPS & TEAMS**

This system can play up to 4 groups simultaneously without crossfire. So, for example, you have a private group for Michael's Buck's Party and another separate group of people, for a Corporate Team Building booking, these two *battle groups* can play in the one area without interference. If it seems that one gaming gun cannot shoot

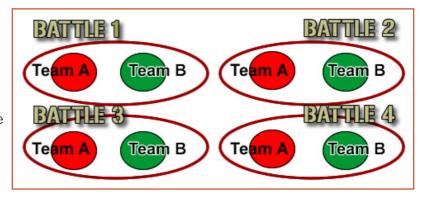

another, double-check that all gaming guns are set to the same battle. If the shooting gaming gun is on battle 1 and the target is on, say, battle 3 they will not hit each other.

Within each battle group you can also set the TEAMS. We recommend playing with friendly fire off, and dividing your players in half so one half is on TEAM A and the rest on TEAM B. Please note TEAM A gamers will not be able to shoot others on their own team. TEAM A gamers can only hit people from TEAM B. If you are having trouble, double-check that you are not trying to shoot someone on your own team.

### **RE-SETTING FREQUENTLY CHANGED SETTINGS**

- Turn the gaming gun on with the key
- Push the left (red) button
- Set the difficulty level required using the left or right button
- Pull trigger to lock in selection
- Select weapon from list based on current gun class
- Select the spare ammunition measured in magazines
- Select heath in hit points
- Select language for audio
- You will then return to the initial boot screen.
- To enter live state now, pull the trigger and wait a few seconds, then you are ready to play!

### **CHANGE RARELY USED SETTINGS**

- Boot the gaming gun with the key
- Push the right (black) button
- Gun Reset (YES/NO) Choose yes to return to factory default settings.
- Pull the trigger to move to the next menu.
- Select device role—Choose "weapon mode" for a gaming gun.
- Zombie Mode disable for standard games
- If all gaming guns have friendly fire ON, then all gaming guns on the same battle can hit each other. We recommend, however, using the team settings (Team A & Team B) and to turn OFF friendly fire, so only Team A gamers can hit Team B, and cannot hit members of their own team. Never mix friendly fire ON gaming guns with gaming guns set to teams.
- Set battle, recommend all gaming guns remain on battle 1
- Select gun class (ideally consistent with the gaming gun case)
- Select FIRE MODE—Shooting = normal game-play i.e. one hit, takes one HP off your opposition. Killing = one shot, one kill.
- Select realism mode; normally this Blanks Disabled. If blanks is enabled the unit has unlimited ammunition and never needs to be reload.
- Stoppages should normally be off, stoppages on means the gaming gun will randomly jam while firing, the likelihood of a jam is determined by the weapon emulation selected.
- Damage should normally be disabled, if on when a gaming gun is killed the display will use the UK military code
- Select the muzzle flash colour (white is standard; however you can also select red or blue (blue will flash green on green installed predator LED's).
- Select hit light colour (select red, blue, or none)
- Select recoil: Normal allows recoil, red dot disappearing when shooting to be based on the recoil value of the current weapon emulations except in easy mode. If recoil is disabled, the red dot remains on even when shooting: If recoil is enabled then the red dot will disappear even in easy mode.
- Select range (outdoor or indoor). We recommend outdoor mode unless you are playing in a tight indoor space. Indoor mode greatly reduces the infrared range.

- Use Default range normally, the system will pick up the range from the weapon emulation, however you can override the weapon's normal range here.
- Warning sound ON/Voice Feedback ON will on a standard gaming gun play the feedback and on a battle box play the time warnings at 1, 30seconds and 15 seconds to go.
- Select sound volume, usually leave on HIGH
- Lock Out: When enabled, this mode locks all the settings so when the gaming gun is rebooted it bypasses all the menus and goes straight to ready state, ideal for a rental business. The easiest way to exit hire mode is to hit the gaming gun with a target reset from a master controller, alternatively turn the unit on, push the left button 10 times then the right button 10 times and turn off/on with the key.

### 1.4 In-Game Functions

The left button reloads the gaming gun [LEFT = LOAD]. If the weapon selected supports it, the right button changes fire mode from fully automatic or burst fire to semi-automatic.


## 1.5 Reading the Display

This guide explains how to read the gaming gun display while in the "ready" state.

Normal Display	Laser Tag Display	Meaning
HP x/y	HP x/y	HP is short for hit points and is a measure of "Health". The digit/s before the '/' is the current hit points and the digits after the '/' is the hit points at game start or after a respawn.
A x/y	C x/y	A is short for ammunition. Before the '/' is the ammunition left in the current magazine and after the '/' is the capacity of the magazine.
		C is short for charge. In Laser Tag games the weapon is assumed to be some form of Laser unit powered by batteries.
R x/y OR R UNLIM	R x/y OR R UNLIM	R is short for reloads. Before the '/' is the number of reloads remaining. After the '/' is the number of reloads at game start, after receiving a reload from a master controller or ammunition box or after a re-spawn.  R UNLIM is short for unlimited reloads. When the gaming gun is set to "easy" mode, then it gives the player unlimited reloads. And the gaming gun reloads automatically.
Н	T	H is short for hits. This is the number of hits made on an opponent during this simulation that did not cause the target to "die".  T is short for tags. The number of tags in this game on an opponent that did not cause a deactivation.
W	5	
K	D	<b>K is short for kills</b> . This is the number of times this gaming gun made the hit that caused the target unit to enter dead state during the simulation.

		<b>D</b> is short for deactivations during the simulation. This is the number of opponents the gaming gun has deactivated during this game.
А ххх%	A xxx%	A is short for Accuracy percentage. For example if you fire twice and hit once then you'll have an accuracy of 50%.
S	S	<b>S is short for spawns</b> . It is the number of times this unit was re-spawned or in laser tag mode, reactivated during this game.
Ind	Ind	<b>Indoor</b> range which is significantly shorter than short range. Used to reduce infrared bounce.
Sht	Sht	Short range
Med	Med	Medium range
Lng	Lng	Long range.
1X	1X	SATR enables up to four separate groups to play simultaneously without cross-fire. This stands for <b>battle 1</b> (or "game 1" in laser tag). The X indicates that is friendly fire on.
1A	1A	This stands for <b>battle 1</b> (or "game 1" in laser tag) with this gaming gun assigned to <b>team A</b> . Team A gaming guns cannot shoot other Team A units. Team A gaming guns can only shoot Team B.
2B	2B	This stands for <b>battle 2</b> (or "game 2" in laser tag) with this gaming gun assigned to <b>team B</b> .
Ready	Ready	This is the current <b>status</b> . Ready is in a live game but not currently performing any action
Firing	Tagging	<b>Shooting</b> the infrared beam at the target.
Reload	Chrgng	Currently <b>loading a new magazine</b> or in laser tag terms loading a new battery.
Empty	Empty	In weapons using BA mode, when a round is fired, the status changes to "Empty" until the right button is used to simulate working of the bolt.
Open Bolt	Open Bolt	In BA mode, after pushing the right button once, the bolt enter into open bolt state.
Close Bolt	Close Bolt	A unit in open bolt state to fire again, must have the bolt closed; this is done by pushing the right button again.
Wound	Tagged	In normal mode, this means an enemy has recently hit this gaming gun and is close to "death". In laser tag mode this means an opponent has recently tagged this phaser and is now close to being deactivated.
Paused	Paused	This gaming gun/phaser is in paused state and will need a resume command by radio or infrared to resume.
Resume	Resume	A paused gaming gun/phaser has recently received a resume command after being in paused state.
Game Over	Game Over	This unit has received an end game signal by radio from a master controller or if out of radio range has had the game timer reach zero.
Near Miss	Near Miss	This unit has recently been hit or tagged but hit points are still high.
FA	FA	Fully automatic.
SA	SA	Semi-automatic meaning one shot per trigger pull

ВА	BA	Bolt Action meaning one shot per trigger pull and the right button must be pushed twice between each shot.
SS	SS	Single Shot: must be reloaded after each shot
RV	RV	Revolver simulation, similar to SA
AL	AL	Automatically loading handgun similar to SA
Jammed	Jammed	The gaming gun has been jammed with a master controller or random stoppages are enabled. Push the reload button to clear the stoppage.
K/D	K/D	This is the classic kill to death ratio. It is one of the statistics shown on screen at the end of a game. K is the number of kills made and D is the number of times this gaming gun has been killed. In laser tag terms this represents the ratio of deactivations made on opponents to the number of times this unit was deactivated.
A/W	A/W	This is the Assists to Wounds ratio. Where Assists are all hits and kills made by this gaming gun and Wounds are all the hits on this gaming gun including any wounds that caused the gaming gun to enter dead state.
Game Stats	Games Stats	When a gaming gun enters game over state the game stats screen is shown. It includes the total number of kills and hits made during the last game only plus the K/D and A/W ratios for the last game. The O stands for objectives which mean hitting the domination box causing your team to now be in control.
Session Stats	Session Stats	The session stats are an accumulated total of stats since this gaming gun was turned on with a key or the clear stats command was issued and received by this gaming gun. To see session stats, send the gaming gun to game over state with a master controller and then pull the trigger once. To view the main screen again, just pull the trigger once.
0	O	O is short for Objective (or for "Owned"). If the Domination Box is in use and the player shots the box causing the other team's timer to stop and the friendly team timer to start/restart that is worth one objective point. The O is only shown on the GAME STATS screen and only if O is greater than 0.

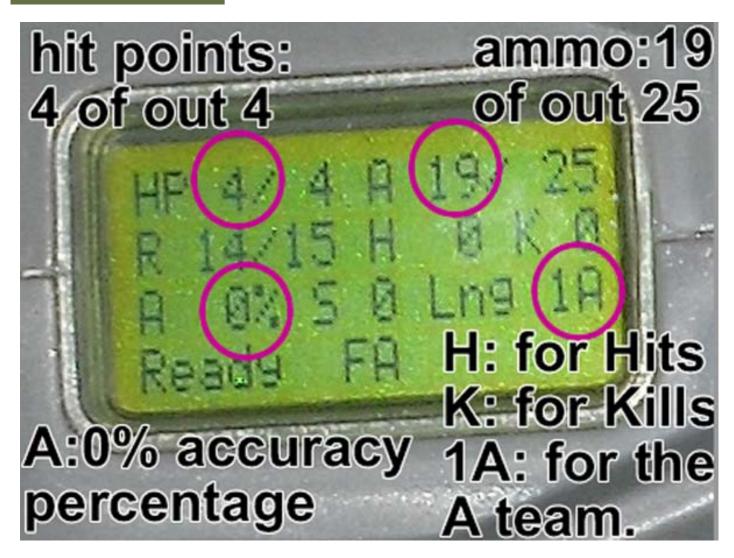

# 1.6 The statistics explained

Take a look at the image above. On the display "H" stands for hits. Now gamers know exactly how many hits they have made. "K" stands for kills. Say a gamer has 4 hit points, the first time you shoot them your opponent will hear a near-miss sound effect, like a bullet whizzing past, the second time you hit them they will hear an "OAUGH" or wound sound effect, hit 'em again and they'll hear another "OAUGH" and the last time you get 'em they will hear the "AAAAAARGH!" dead sound effect. On your display (see above) you will see H 0 K 0. Because, in this example case you used 6 bullets for 0 hits, your accuracy percentage is 0%.

Different SATR guns are allocated different amounts of ammo depending on the weapon it is currently emulating. Next "R" stands for reloads, in this case the gamer has 14 of a possible 15 reloads left. "S" stands for number of spawns (how many times you have been re-spawned). The next section represents the gaming gun's current weapon's range

- Lng: Long (Outdoors for machine guns and most rifles)
- Med: Medium (Outdoors for carbines and the personal defence weapons)
- Sht: Short (Outdoor for sub machine guns and pistols) or
- Ind: Indoor (All units operating in a tight indoor environment or around inflatable's).

The letters "FA" stands for Fully Auto, you can also have SA for semi-auto or BA for bolt action. The word "Reloading" on the display indicates the gun is currently in the process of reloading.

### 1.6.1 The Display Screen Basics (Laser Tag Theme)



HP = Health Points 5/5

C = Charge 25/25

R = Reloads Unlimited

T = Tagged (counts how many they have Tagged)

D = Deactivated (count how many they have deactivated)

A 100% = Accuracy %

S= Zero re-spawns/re-activations

SHT = Short Range (this could be medium or long as well)

1A = Game 1, Team A (this could be 1B; meaning Team B)

Ready = Status of the phaser (this can be tagging, game over, deactivated)

SA = Semi Automatic (this could also read FA = Fully Automatic)

At the end of a game players can see their game statistics, see an example below.



# SATR System – An Overview


SATR is short for Small Arms Transmitter/Receiver. SATR is an electronic system used for the live action combat simulation for entertainment. SATR is purposely designed to be configurable to be suitable for "Laser Tag" style games all the way up to realistic training programs for the military.

Each SATR unit is capable of acting in various modes. The options include:

- Weapon
- master controller
- battle box (medic box, ammo box)
- Domination Box
- Mine, and
- Radio Repeater.

This manual applies only to SATR code versions 1.4 and later. A separate guide is available for earlier versions of code.

SATR supports a Laser Tag theme that can be used instead of the normal military theme. With the Laser Tag theme the terms used

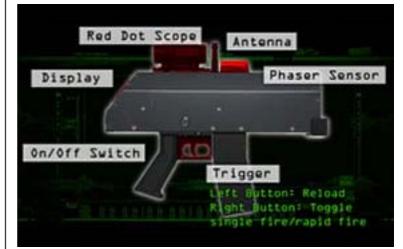

changes and some alternative functionality is available.

# 2.1 Key SATR Features

- Software support for 69 different small arms including a range of hand guns, sub machine guns, rifles and machine guns
- Real time hit feedback
- Real time on gun individual performance statistics
- Back lit LCD display (back lit controlled by a special button)
- Radio control system to help staff manage the games
- Three difficulty levels
- Automatic re-spawn counting
- Indoor support (lower infrared power
- Removing of friendly fire (optional)
- Smart medic and ammunition boxes
- Three mine modes.
- Laser Tag settings (when the language selection is "Laser Tag")
- Integrated support for Zombie and Domination style games.

# 2.2 Factory Default Settings

Unless otherwise stipulated at the time of order, the factory default settings are:

• Difficulty: Easy Range: Long Mode: Outdoor

Battle: 1

Friendly Fire: On (i.e. no teams)

Muzzle flash color: White

Voice feedback: on

Volume: high

Language: American Female English (unless you've specified an alternate language).

# 2.3 Backward Compatibility

Version 1.5e of SATR is backwardly compatible with older versions of SATR with the following limitations:

- An ammunition box must be version 1.4 to reload gaming guns with 1.4 or later code loaded
- An medic box must be 1.3a or later to re-spawn a gaming gun with 1.3 or later code
- A master controller must be 1.3a or later code to re-spawn gaming guns with 1.3 or later code.
- For a gaming gun to use the kill mode, the target gaming guns also require 1.4 code.
- A master controller must be 1.4 code to reload 1.4 code version gaming guns
- Set volume master controller command will only work on 1.5 code version or later target gaming guns.
- Lock mode only works on 1.5 enabled gaming guns. Hire mode renamed Lock mode in SATR version 1.6a.
- Zombie games are only supported in version 1.6a or later
- A Domination Box itself requires 1.6a or later code however any version of earlier version of code that supports team setting can be used on the gaming guns.

### 2.4 Master Controller Mode

The Master Controller can perform both infrared & radio functions:

Normal Infrared (direct line of fire - target a single unit)

COMMAND	FUNCTION
Spawn	Target gaming gun is re-spawned if they were in dead state
Reload	Target gaming gun that has used at least 1 magazine of ammunition will have all their ammunition restored.
Pause	Target gaming gun enters into a pause state.
Resume	Target gaming gun in pause state returns to normal operations.
Target Reset	Reset all factory default settings except language to target gaming gun.
Kill	Target gaming gun immediately enters dead state.
New Mission	Target gaming gun starts a new game restoring all health, ammunition and resetting all statistical information. This is useful if you have send a "game start" command via RF to the entire group and one unit didn't start.
Set Volume/Chg Volume	Changes the target gaming guns volume
Jam Weapon	Any target gaming guns become jammed.
Test RF	This is quick test option on the field to test the infrared sensors are working and the digital radio system is transmitting.
Shoot	Target gaming gun has their hit points reduced by 1.

Interrogate Set Health/Ch Hth	Shoot at a target gaming gun to retrieve key statistics about it.  Set the target gaming gun to a new maximum hit point level.
Set Difficulty	Updates the difficultly level of the target gaming gun including setting the hit points to the default value of the specified difficulty level
Set Game Timer	Specifies the number of minutes the battle will run for from the time the start function is used before the gaming guns automatically enter the game over state.
SET Gun Time	This command sets an individual timer to target gaming guns. This means a particular gamer can have a certain amount of game time before their gaming guns enters game over state.
Set Battle	A gaming gun will only accept radio commands, accept hits and hit others if they are all in the same Battle group (or game group if you are using the Laser Tag settings). This function means separate battles can be played in close proximity to each other without them affecting other groups.
Set Team	This function allows to the teams to be set to team A or team B by infrared command. Phasers on team A cannot be hit by gaming guns on their own team. Team A units can only hit Team B. Do not mix friendly fire on with team settings – all gaming guns should be set to a team or all gaming guns should have friendly fire on. Generally for civilian use Battlefield Sports recommends that friendly fire is turned off by assigning gaming guns to a team.
Set/Chg Weapons	Step 1: Specify what weapon emulation in each gun class (Hand guns, Sub machine guns, Rifles and machine guns) you want to use.  Step 2: Then use the Chg Weapons command and shoot the master controller towards the gaming guns to change their weapon emulation to match the one you just specified on your master controller.

**Infrared** functions when Laser Tag language is selected Please note: Instead of gaming guns we use the word phaser.

COMMAND	FUNCTION
Reactivate	Function is to reactivate a phaser that is currently deactivated.
Charge	Equivalent of reload ammunition, except with a laser theme, one has power depletion that can be recharged.
Pause	Sends the target phasers into pause state.
Resume	Target phaser in pause state return to their state before the pause.
Set Blu Team	Resets the target phaser back to a working set of defaults suitable for laser tag themed games. It also sets the phaser to team B. All phasers will be configured to easy mode and medium range with a blue muzzle flash and blue hit light. A special weapon

	emulation is enabled which acts like a Scorpion but has a 50round magazine.  This command will also lock the target phaser into lock mode. In lock (hire) mode if the unit is turned on with a key, it boots straight to ready state bypassing all the menus. It will require a target reset or turning on with the key and pushing the left button 10 times and the right button 10 times then turn off and on to get back to the menus.
Set Red Team	Resets the target phaser back to a working set of defaults suitable for laser tag themed games. It also sets the phaser to team A and the hit light and muzzle flash will be red. Sets unit to hire mode.
Target Reset	Resets most settings back to factory default values except for language settings. Will remove target units from hire mode.
Deactivate	Sends target phaser into deactivation state regardless of health of the phaser.
New Mission	Target a phaser starts a new game. This is useful if you have send a "game start" command via RF to the entire group and one unit didn't start.
Set Volume/Chg Volume	Changes the target phaser's volume
Jam Weapon	Any target phaser become jammed.
RF Test	Target phaser's head sensor lights flash if the sensor system is working and the responds with RF message back to master controller.
Тад	Target phasers hit points are reduce by 1.
Interrogate	Shoot at a target phaser to retrieve key statistics about that phaser
Set Health/Ch Hth	Updates the hit points of target phasers based on the value specified by the operator.
Set Difficulty/Chg Dif	Updates the difficultly level of the target phasers including setting the hit points to the default value of the specified difficulty level.
Set Game Timer	Specified the number of minutes the game will run for from the time the start function was used before the phasers automatically enter into the game over state.
SET Gun Time	This command sets an individual timer to target phaser. This means a particular player can have a certain amount of game time before their phaser enters game over state.
Set Game/Chg Game	Game is the equivalent of Battle. A phaser will only accept radio commands, accept tags and tag others if they are all on the same game.
Set Team/Chg to Team	This function allows to the teams to be set to team A or team B by infrared command. Phasers on team A cannot be tagged by phasers on team B and vice a versa. Do not mix friendly fire on

	with team settings – all phasers should be set to a team or all phasers should have friendly fire on.
Set/Chg Phasers	Specify what phaser emulation in each phaser class (Tiny, Small, Medium, Large) and then use the Chg Phasers command to make that so on phasers targeted by the master controller.

Radio commands affect all SATR units configured to the same battle group (or game group).


- Pause
- Resume
- End Game (disables all SATR units in this battle)
- Start Game (enables all SATR units that were disabled)
- Clr Stats (clear all the player stats that have accumulated, very useful at the beginning of each session as an alternative to resetting all stats by key on/off)


# 3 SATR – Standard Playing Unit

### 3.1 On Boot Test

If the reload button is held down during the initial boot, the system enters into a special test mode. This is for testing by the technicians after a repair or as part of the final quality assurance test at the factory. This is for testing the muzzle flash LED's, hit light LED's and radio system. To test the LED's scroll through them using the reload button. To test the RF set up a battle box using the trigger switch to RF Test Mode RX and the unit to be tested RF Text Mode TX.

### 3.2 Boot Sequence

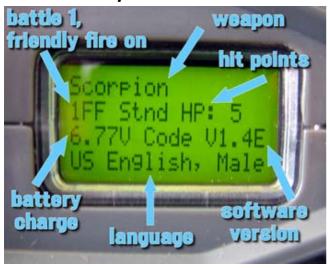

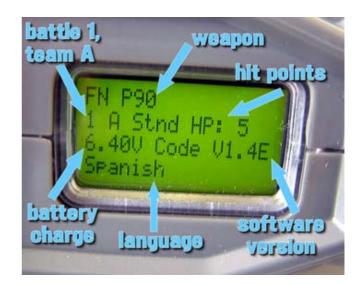

The SATR unit is turned on and off using a switch operated by a key. Upon boot there are 3 options available to the user:

- 1. **Pull trigger**: Commence a few second count down to use the last configuration
- 2. **Push left (red) button**: Go to menu for selecting difficulty level, weapon, reloads, health, and language.
- 3. **Push right (black) button**: Go to menu for selecting mode (weapon, medic box, ammunition box, claymore mine, normal mine and dirty mine), gun class, muzzle flash, hit light color, battle, indoor/outdoor mode, voice feedback status, Master Controller mode on/off, volume.

During the boot sequence the back light on the display is automatically turned on until the 3 second count down commences. The back light is also on when the SATR unit is used in controller mode. During a ready state, the back light will only come on after pressing the right button.

### 3.3 Menu Scroll and Select

All menus in SATR operate in the same manner. Press the left (red) button to scroll *down* to the list of options. The right (black) button is used to scroll *up* the list of options. The trigger is used to select the current option.

# 3.4 Reload (left/red) Button Menus

### SELECT DIFFICUTLY LEVEL

On pressing the reload button, the menu to select the difficulty level comes up. Scroll using the left or right buttons to select a difficulty level and then pull the trigger to lock in the selection.

Difficulty Level	Unlimited Reloads	Minimum Time between hits (seconds)	Automatic Reload	Default Health (hit points)	Recoil <sup>1</sup> (turn off scope power)
Easy	Yes	2	Yes	5	No
Standard	No	1	No	5	Yes
Hard	No	0.5	No	3	Yes

### **SELECT WEAPON**

After selecting the difficulty level, the selection of available weapons for the current gun class is listed. To change the gun class, press the right (black) button on initial boot must be used.



As the user scrolls through the list, a verbal description of the weapon is played explaining the weapon and its capabilities. A full description of each weapon is available in the appendix.

### **SET RELOADS**

The default number of ammunition reloads is determined by the weapon selected in the previous step. But you can override this and set the number of reloads.



### **SET HEALTH**

Health is measured by a hit point system. Each time a gamer takes a hit, the number of hit points is reduced by 1. The lower the initial health value is, the more realistic and harder the simulation is.

<sup>&</sup>quot;Rels" is the default number of reloads

<sup>&</sup>quot;Mag" is the magazine capacity of the weapon.

<sup>&</sup>lt;sup>1</sup> If recoil is set to NORMAL.

For beginners, Battlefield Sports recommends 5 hits (hit points) and for advanced gamers, between 2 and 3 hit points works best.



### **SELECT LANGUAGE**

A language can be chosen for the in game spoken sound effects.



The languages available are:

- 1. US English Female (this is the factory default, unless otherwise stipulated)
- 2. US English Male
- 3. British English British
- 4. Arabic
- 5. Mandarin
- 6. Deutche (German)
- 7. French
- 8. Italian
- 9. Japanese
- 10. Portuguese
- 11. Russian
- 12. Spanish
- 13. Vietnamese
- 14. Laser Tag US English-Female (changes voice sounds and display settings to Laser Tag)
- 15. Custom (you can have your own language, you will just need to provide us certain sound files when you order, i.e. 11khz 8 bit mono wav file format please contact us if you would like this option).

The Laser Tag sound scheme is for those operators that need something tamer than the normal spoken sound effects. Usually the Laser Tag sound scheme is used in conjunction with the Scorpion weapon emulation. Laser Tag sound effects say "Tagged", "De-activated", "De-activated Already", "Game Start" and "Game Over" in US female English. The display also changes in ready mode to have C for charges (ammunition), T for tags (hits), and D for deactivations (kills).

Custom file name on SD card	Sound
NOAMMO.WAV	Ammunition Depleted
DEAD.WAV	Dead Already

HIT.WAV	Casualty
KILL.WAV	Kill Confirmed
COMPLETE.WAV	Mission Complete
START.WAV	Mission Start
PAUSED.WAV	Paused
RELOADED	Reloaded
RESPAWN	Re-spawned
CONTINUE.WAV	Resumed

# 3.5 Mode (RIGHT/black) Button Menus

This series of menus is entered after initial boot with key switch and pushing the mode switch found on the right hand side of the SATR unit.

### **GUN RESET/PHASER RESET**

To set a gaming gun back to factory default settings for the current gun class, then use this option to do so.

Push the left button and then pull the trigger to reset to defaults. This will not change the gun class.

### **DEVICE ROLE**

This determines if this SATR unit should act as a Master Controller, mine, medic box, ammunition box or a standard weapon.





SELECTION	EFFECT
Weapon Mode	Means this gaming gun acts like a normal weapon for a gamer.
Ammunition Box	Unit will boot in reload mode each time the trigger is then pulled in a game, it will perform the Master Controller function of "Reload".  When set to an Ammunition Box the unit can be configured to perform a specified number of reloads or reload for a
	specified time.
Medic Box	Unit will boot in respawn mode, If the medic box is assigned to a team it will only re-spawn that team. When in ready state, the reload and mode buttons are disabled. A gamer re-spawns by pushing the main trigger button on the unit while ensuring the sensor can be hit by the infrared beam.
	It also resets the respawn counter on the RF "game end" and "game start" function. While in live state, the reload and mode buttons are disabled.
	Medic boxes can be configured to perform a specified number of spawns or spawn for a specified period of time. A RF end/start sequence will restart these counters.
	In timed games, with voice feedback turned on, a medic

	box will provide an audible warning at the 1 minute, 30 seconds and 15 seconds to go marks.
Combo Box	This mode combines the functionality of a medic box and an ammunition box. The left reload button generates a reload command and the trigger button generates a spawn. The right button remains disabled.
Controller	Standard Master Controller formerly known as a referee gun.
Claymore Mine	Designed for claymore mine case. A claymore in this mine will use the kill mode causing the target gaming gun to reduce to 0 hit points immediately.
Normal Mine	Claymore mine that only causes 1 hit per explosion
Dirty Mine	Using shoot signal from claymore but shoots continuously for 22 seconds.
Radio Repeater	This mode is designed to repeat the radio signals from a master controller. The signals repeated are pause, resume, start and end. A device configured as a radio repeater should be placed at the highest point of the field ideally in a tower with minimal amount of line of sight blocking objects.
Domination Box	The domination box support Domination style live plays where the objective is to control/dominate an area for as much time as possible. The domination box keeps track of how much time each team was in control. Depending on the option chosen by the CO, A domination can be triggered by shooting the box or by pushing a button. The red button is used for team A and the blue button for team B. While a team is on control the hit lights flash indicating control, a red flash means the A team is in control and the blue flash means the B team is in control. When the game ends, the Domination box will say which team has won and by how much. The team that won the game when the game end is also indicated by the colour of the flashing hit light, Red for the A team and Blue for the B team.

### Follow on menu if medic box option is selected

rollow of menu if medic box option is selected		
SELECTION	EFFECT	
Medic Box Type	Unlimited means the medic box is perform re-spawns	
<ul> <li>Unlimited Spawns/Unlimited</li> </ul>	Time limited means the operator can specify how many	
ReAcvt	minutes to perform re-spawns. Best to set this, perform an	
Time Limited	radio end game to set the medic box into game over state	
<ul> <li>Limited Respawns/Limited</li> </ul>	and then start the timer with the master controller Start	
ReActvts	(radio) function.	

	Limited means setting a fixed number of re-spawns the medic box will perform before it will automatically stop.
Any Team	Can respawns gaming guns set to team A, Team B or Friendly fire ON.
Select Range     Outdoor     Indoor	Outdoor is the same as long range for a weapon and indoor is the same as indoor for a weapon.
Warning SND ON/OFF	Can be used to turn off the audible warnings when the game is close to finishing. In most cases we recommend you leave that on.
<ul> <li>Battle Modes</li> <li>Any Team</li> <li>Team B</li> <li>Team A</li> </ul>	With any team, the medic box will perform spawns regardless of what team the gaming gun is set to. If gaming guns are assigned to a team, then it is best to assign the medic box to the same team. A medic box configured for team A can will not respawns gaming guns on team B.
Battle/Game X	It is important to assign a medic box to the same battle/game as the gaming guns and master controller that will be used for this game. The Battle/Game value is used to isolate one battle from another so they don't interfere with each other.

# Follow on menu if a **Mine** option is chosen

SELECTION	EFFECT
Multi Mine Always Live	Mine rearms in 6 seconds automatically
Single Mine One fire only	Once fired must be reset before it can fire again. A mission end/mission start by RF will rearm the mine.
Regen Mine 2.5min Reload	Mine rearms in 150 seconds automatically
Trigger Mine Shoot to Fire	The mine can be triggered if the sensor on the claymore is hit by any gaming gun.
Suicide Vest	This is a special claymore mode that lets the unit act as a suicide vest. The suicide vest can take hits like a normal gaming gun and the mine cannot be triggered if the gamer is killed.

# Follow on menu if a **Weapon** followed by Zombie - **Haunted** option is chosen

SELECTION	EFFECT
Zombie HP	When a player becomes a Zombie this is how many hit points they will get.
Survivor/Zombie	A Survivor is a living human. A zombie is undead. Humans

that die and then take a respawn are automatically turned
into a Zombie.

Follow on menu if a **Weapon** followed by Zombie - **Apocalypse** option is chosen

SELECTION	EFFECT
Zombie HP	When a player becomes a Zombie this is how many hit points they will get.
Zombie Infection Time per HP	This is how many minutes before the player dies of infection based on the current hit points. If the current infection time is less than would be the case based on the hit points immediately after being hit, the current infection time is retained.
Resurrection Time (Zombies)	After a Survivor dies, they automatically respawns as a Zombie after the number of minutes specified here. A respawns during the period from death to resurrection will restore full hit points but only temporarily stop the infection.
Survivor/Zombie	A Survivor is a living human. A zombie is undead.


### More about Zombie's

In Zombie mode, the Zombie makes a random Zombie sound effect approximately every 30 seconds. Zombie attacks have no muzzle flash and are also set indoor range and they don't have a red dot, forcing Zombies to get in close. The Zombie's do have the advantage that every second they automatically shoot with making any sound. Zombie's can also receive respawns. If the trigger is pulled, the Zombie gun will fire with a sound effect but no muzzle flash.

Zombie are effectively always on team B and the survivors are team A. Using the change team function on the master controller can therefore swap a player from the Zombie team to the Survivor team and vice versa.

### **GUN CLASS**

The gun class is used to specify the general class of weapon that this SATR unit has been installed on. It reflects the size, weight and general looks of the weapon so that only weapons from the same gun class can be selected in normal operation.

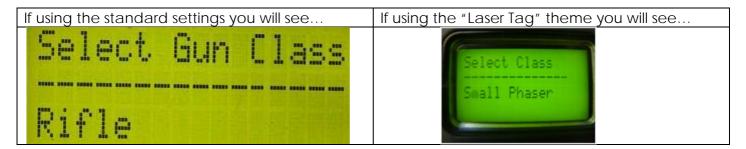

The machine gun class is assumed to be weapons on some sort of mounting such as a bipod or tripod or vehicle. The result is machine guns have a lower recoil value than many rifles.

There are 4 gun classes available including hand gun, rifle, sub machine gun and machine gun.

### LASER TAG CLASS

When Laser Tag sound scheme is in effect, the classes change to Tiny Phaser, Small Phaser, Medium Phaser and Large Phaser. Here are the equivalent terms:

Tiny Phaser	Handgun
Small Phaser	Sub machine gun
Medium Phaser	Rifle
Large Phaser	Machinegun

### RECOMMENDED GUN CLASS BY MODEL

MODEL	RECOMMEND GUN CLASS	LASER TAG EQUIVALENT
Spitfire	Submachine gun	Small Phaser
Scorpion	Submachine gun	Small Phaser
P90	Submachine gun (P90)	Small Phaser
Commando	Rifle	Medium Phaser
Pulse Rifle	Rifle	Medium Phaser
M4	Rifle	Medium Phaser
M16	Rifle	Medium Phaser
Morita Sniper	Rifle	Medium Phaser
Morita SAW	Machinegun	Large Phaser

### **FIRE MODE**

SATR supports variable damage. You can select either a standard "shooting" or tagging mode; or a one-shot/one-kill mode.



Shooting/Tagging	This is the normal mode that means the target gaming gun hit points are reduced by 1 on each hit or tag.
Killing/De-Activating	In this mode a single hit or tag from the shooting gaming gun will cause the target unit to go into

dead/deactivated state. Normally only used with high powered sniper rifle weapon emulations.

### **MUZZLE FLASH**

The muzzle flash is the forward facing LED's that flash when a gaming gun is firing. The colour of the flash is configurable. The default white is used usually as it tends to look the most realistic. However the red and green options are sometimes used to distinguish teams at night, this is typically done in conjunction with setting the hit light to the same colour.



The default is white muzzle flash. The options are:

- White Muzzle Flash
- Red Muzzle Flash
- Green Muzzle Flash (or alternative a blue muzzle flash if you've ordered Cobras, this needs to be stipulated at time of order)
- No Muzzle Flash

Even if a muzzle flash colour is selected, a SATR unit configured as an MP5 SD will still not generate a muzzle flash.

### **HIT LIGHT**

The hit light is the LED that flashes in the sensor domes when a unit takes a hit and stays on while in dead state.

The default "No hit light" option results in no hit light showing when SATR is hit but does result in a red hit light when the unit is dead. Because SATR has a radio hit feedback system, the hit light is unnecessary in many circumstances.

The other options are green and red hit light.

### RECOIL.

In SATR, the loss of accuracy that comes from firing automatic weapons after the 1st shot in a burst is simulated by temporarily switching off power to the red dot scope. How long the scope is switched off depends on the recoil value of the current weapon emulation.

NORMAL: The red dot disappears each time the weapon shoots unless the difficulty level is easy.

ENABLED: Same as NORMAL except in EASY mode, the red dot does disappear.

DISABLED: The red dot comes on and stays on when shooting regardless of difficulty level.



### RANGE: INDOOR/OUTDOOR

When operating a very close quarter's games typically of an indoor environment, the indoor option should be selected. The indoor option significantly reduces the power of the infrared beam. The purpose of range reduction is to minimize the level of infrared rebound sometimes known as IR

bounce. Setting indoor mode means the gaming gun will ignore the normal range for the specified weapon including range override. Indoor range is even shorter than "short range".

When operating indoors Battlefield Sports recommends that all walls are painted matt black and we recommend that friendly fire is turned off by setting the teams.

### **RANGE OVER-RIDE**

Every individual weapon simulated by SATR has a range specified for it. However the default range associated with the weapon are designed to create fair game balance between different model gaming guns. However if required, you can specify the range independently of the weapon emulation by using the "Select Range" menu item.

If the default range is selected, then the range used is the range of the weapon selected at the time of firing unless indoor mode is selected.

If SATR is installed in a unit with a short range 25mm lens such as a Spitfire made prior to 2009, the range over-ride should be used to force the long range while simulating a sub machine gun. A Spitfire configured as an UZI would normally be short range. But you may want to use the range over-ride, in other words when you boot up the Spitfire set it to long range. Otherwise its range will be ultra short. Effectively double short range; one from the SATR electronics range reduction and one from the limitations of the short focus length on the 40mm lens.

### **SOUND VOLUME**

For certain situations the volume of the SATR units needs to be reduced especially for indoor use or in public venues. There are three volume levels to choose from:

elect Volume

- High
- Medium or
- I ow.

### **VOICE FEEDBACK**

Some gamers may prefer that the voice sound effects are turned off so

they can be stealthier. Hit feedback is still provided by flashing the red dot scope twice when the gaming gun makes a hit and four times when it makes a kill. Battlefield Sports recommends that the voice feedback is set to ON for all gamers in all standard sessions for the public.

With a medic box, ammunition box and a master controller if the Warning SND is ON and a timed game is in operation each of these devices will make an audible warning with 1 minute, 30 seconds and 15 seconds to go.

### **FRIENDLY FIRE**

This option allows the operator to disable friendly fire if required. For commercial entertainment, Battlefield Sports highly recommends that the teams are set using the master controller and therefore eliminating friendly fire. Friendly Fire ON should only be used where there is low gamer to space ratio and the gamers are very experienced.



"Friendly fire ON" means that this SATR can accept hits from any SATR unit assigned to this battle.


"Team A" means this SATR unit will only accept hits from SATR units assigned to TEAM B and only if they are in the same battle. Therefore Team A gaming guns cannot hit this unit.

"Team B" means this SATR unit will only accept hits from SATR units assigned to TEAM A and only if they are in the same battle.

**Warning**: It is very important that in any single battle all gaming guns are set to a team or all gaming guns have friendly fire ON.

### **BATTLE/GAME**

SATR is designed to allow one battle to be isolated from another battle so that radio and infrared messages between battles is prevented. Four separate battles are supported. In Laser Tag mode this is called "Game" instead of Battle.

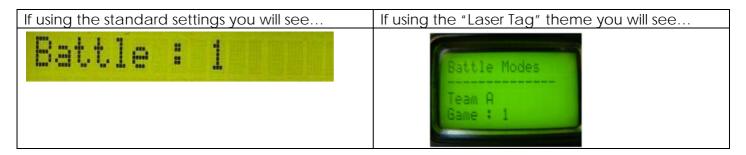

The Battle can also be set using a SATR unit working in Master Controller mode.

# 3.6 Standard Playing Mode

Assuming the unit has not been configured to operate as a Master Controller, this is the mode of operation after the boot/menu selection sequence is complete.

### 3.6.1 Count Down/Save Configuration

Whenever SATR processes a re-spawn or starts a new game, it commences a 3 second count where the gamer cannot take any action but also cannot be hit by any other SATR unit. After the 3 second count down is complete, the audio files load into memory. The result is to give a gamer approximately 4 seconds to move to a safer position. By pulling the trigger the user can bypass the 3 second count down and go to audio file load immediately.

If a gaming gun is started with a radio message, the gaming goes immediately to ready.

The countdown also displays the current battle so that gamers can check their unit will work with the other units in the same battle.

### 3.6.2 Ready

Upon start up or whenever SATR is alive and is not performing another function like shooting, reloading or taking a hit, it goes into ready mode.

### FIRING STATISTICS

Character	Meaning
H/T	Hits/Tags: Number of hits made on another SATR unit this game that
	did not result in a kill.

### November 8, 2013

## [USER GUIDE FOR SATR CODE V1.6A+]

K/D	Kills/Deactivations: The number of hits made on another SATR unit this game that resulting in a kill (dead)
Α	Accuracy: The number of hits including kills compared to number of rounds fired as a percentage

### **MODES OF FIRE**

Mode of Fire	Description
FA	Fully Automatic
BF	Burst Fire - limited to 3 rounds per automatic burst
SA	Semi Automatic
BA	Bolt Action
RV	Revolver
AL	Auto Loader (Pistol)
SS	Single Shot

### **3.6.3 Firing**

From the ready state, a trigger pull will cause SATR to commence firing assuming there is ammunition left in the current magazine. For weapons with a BA mode of fire, the right button will need to be pushed after each shot before another shot can be fired.

Upon firing SATR will generate an infrared pulse for every round fired as well as a muzzle flash and appropriate shooting sound effect.

If the fire mode is FA, then SATR will keep firing while the trigger is pulled until it runs out of ammunition or receives an external event such as a hit.

If the fire mode is BF, SATR will fire up to 3 rounds with the trigger pulled. To continue firing the trigger must be released and then pulled again.

In all other modes of fire, after each shot the trigger must be released before another shot can be made.

If the SATR unit makes a hit on another SATR unit that does not result in a kill, the number of hits 'H" is incremented by 1. If SATR unit makes a hit that causes a kill, the number of kills 'K' is incremented by 1. Upon making a hit, a voice message in the selected language will be heard saying "Casualty". If a kill is made, a voice message in the selected language will be heard saying "Kill Confirmed". If the Laser Tag sound scheme is employed, then we have T for tags, D for deactivations and the sound effect for a tag is "Tagged" and for making the final tag it says "Deactivated"

If a SATR unit hits another SATR unit that is already in dead state, a voice message will be heard saying "dead already" in the language selected. The red dot will also flash once. If the Laser Tag sound scheme is used it will say "Deactivated already".

All such voice messages are produced by the firing SATR unit.

Each time a shot is fired which misses the target, the accuracy percentage will reduce (minimum of 0%) and each time a hit is made, the accuracy percentage will go up. Accuracy is rounded to the nearest whole number.

If the gaming gun has a recoil value greater than 1, then the red dot will be powered down immediately after it fires. The power down time is 0.5 seconds for each point over 1 of recoil associated with the current weapon, typically in the range of 0.5 to 1.5 seconds. Each shot fired re-starts the power down timer. This function does not occur on easy mode.

Because easy mode does not have the recoil simulation feature, it is the recommended mode for zeroing the scope.

The bolt action rifle requires manual working of the bolt after every shot. In SATR this is simulated by the operator having to push the right button twice after each shot.

After a round is fired, the status changes to "Spent Case". After the first right button push the mode changes to "Open Bolt"

And then after the second button push the status will go back to "Ready".

### 3.6.4 Reload

While in the ready state, pushing and releasing the reload button (left side) will start the ammunition reload sequence assuming there are still reloads available. If the current magazine is full, the reload button is disabled.

While reloading SATR cannot shoot but can be hit by other SATR units. Taking a hit, while reloading slows down the reload process.

Once the reload process is complete, all the ammunition in the current magazine is restored to full.

### 3.6.5 Right Button

The right button during a live game is used to toggle between fully automatic or bust fire and semi automatic fire. This mode does not perform any action on weapons that do not have secondary mode of fire. For example some machine guns only have fully automatic fire and therefore pushing the right button will have no effect.

The current fire mode is shown on the bottom line of the LCD. For example FA means fully automatic and SA means semi-automatic.

Pushing the right button during live state will always cause the back light to come on for the LCD.

### 3.6.6 Hit State

When a unit is alive and it receives an infrared signal from another SATR unit in the same battle, a hit is triggered. If the hit reduces the health to 0, SATR enters into a "dead' state. When hit, a sound effect is heard, the actual sound effect depends on the current health level

Health Level	Sound Effect
4 or more	Near miss
2 or 3	Wound

SATR assumes that the character cannot really take 4 or more hits before being incapacitated, so when high hit points are used, early reduction in hit points are assumed to be a combination of skill and luck that the character managed to just avoid taking serious damage. For realistic games, Battlefield Sports recommends 2 or 3 hits points are used.

### 3.6.7 Dead/Deactivate State

The "Dead" status is reached when a SATR unit receives a hit from another SATR unit in the same battle and the receiver's health was 1 before the hit was received. Health is then reduced to 0.

In dead state, all gamer controlled functions are disabled. To escape from this state requires one of the following events

- Re spawn from a Master Controller or medic box (recommended for in game spawns)
- Game end/start radio signals
- New Game IR signal from a Master Controller
- Re-start using key switch (not recommend usually as this clears the statistics)

In Laser Tag mode, the term "Deactivated" is used instead of "Dead".

### 3.6.8 Pause

A SATR unit currently in live state can be stopped from taking any further gamer input by receiving a pause signal.

A pause signal can be received by radio, in which case all SATR units in the same battle will enter pause state or the signal can be received via an IR message. In the case of an IR message from a Master Controller, only the SATR unit targeted by the Master Controller will enter pause state.

When a SATR is first paused, a spoken sound effect is heard on the paused unit saying "Paused" in the language selected.

### **3.6.9 Resume**

The resume function only works on SATR units that are currently in pause state.

When a SATR gaming gun is resumed, a spoken sound effect is heard on the resumed unit saying "Resumed" in the language selected.

### 3.6.10 **Game Over**

The "Game Over" signal comes via a radio signal from the Master Controller and impacts all SATR units in the same Battle as the Master Controller is configured too.

When the signal is received a voice saying "Mission Complete" can be heard on the receiving unit in the language selected.

While all gamer controlled functions are frozen, the final game statistics can be seen on the LCD.

To exit game over you need to send a "start" via radio, or "new mission" via infrared, or manually use of the key switch.

If a timed game is used, the time left in the game will be displayed on the LCD of the master controllers and all gaming guns in weapon mode. If the gaming gun is out of RF range of a master controller at game end, it will still enter game over state based on the game timer.

### **3.6.11** Game Start

The game "Start" function starts a new game including resetting all statistics to 0 and restoring health and ammunition to full values assuming the target gaming guns are currently in game over state.

The game start signal can be received either via IR signal or radio signal. The radio signal only has effect if the gun is configured to the same battle as the Master Controller.

When the signal is received a voice saying "Mission Start" (or "Game Start" in Laser Tag sound scheme) can be heard on the receiving unit in the language selected.

If a timed game is started, then a countdown time will be displayed on the master controller and all target gaming guns in weapon mode. For gaming guns already started, a new radio start command will reset the countdown timer.

### This is an explanation of the K to D ratio used in the Battlefield Sports' SATR system.

SATR has two main themes – milsim and laser tag. With the SATR system the operator can select either a milsim theme and use the terms "hits / kills" and or a Laser Tag theme and use the terms "tags/deactivations". No matter which theme you select, the letters on the display for these statistics remain k/d and a/w.

The K/D ratio is the classic kill to death ratio. k/d ratio is a very common term in video games. It is one of the statistics shown on screen at the end of a game. K is the number of kills made on an opposition player and D is the number of times this gaming gun has been killed. In laser tag theme this represents the ratio of deactivations made on opponents to the number of times this unit was deactivated.

The a/w ratio provides some extra info for the gamer. This is the Assists to Wounds ratio. Where Assists is all hits and kills made by this gaming gun and Wounds are all the hits on this gaming gun including any hits that caused the gaming gun to die. In laser tag theme this represents the ratio of tags made on opponents to the number of times this unit was tagged. Basically it is all the hits you've made versus all the hits you've taken. It is a good guide for your gaming performance.

### 3.7 Master Controller Mode

To configure a unit as a master controller on initial boot push the right button and then change the mode of operation to "Controller". The functions of the Master Controller can be broken down into three types

Characters after function	Meaning
name	
(IR)	Signal is sent by infrared beam and only affects


### November 8, 2013

### [USER GUIDE FOR SATR CODE V1.6A+]

	the SATR unit/s being aimed at by the Master Controller. Generally the target gaming gun hit light flashes when it receives an IR signal from a master controller.
(Radio)	The signal is sent by radio message and will be received and processed by all SATR units currently configured to the same battle as the Master Controller
Blank	These functions do not send a signal to any SATR units. They are used to change internally values such as difficulty level, team, game timer, hit points and battle.

# 3.7.1 Spawn/Reactivate Mode (IR)

The default function of a Master Controller is to perform spawns on SATR units that are currently in dead state and to count the number of times this has been successfully performed during the current game.

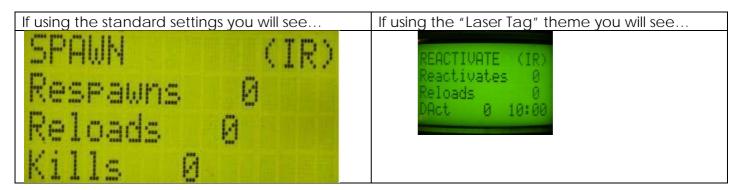


The first line indicates the current mode the Master Controller is operating in; in this case it is in "SPAWN" mode. The "(IR)" indicates the function is performed by the infrared emitter directed by the referee towards the target SATR unit.

Other modes are accessed by using the reload button to scroll down and the mode button to scroll up. To trigger the current function, the trigger is pulled.

A spawn restores all the ammunition and hit points of the target SATR unit.

# 3.7.2 Reload/Charge Mode (IR)


This mode restores the number of magazines on the target SATR unit to the amount specified in the initial configuration of the target SATR unit.

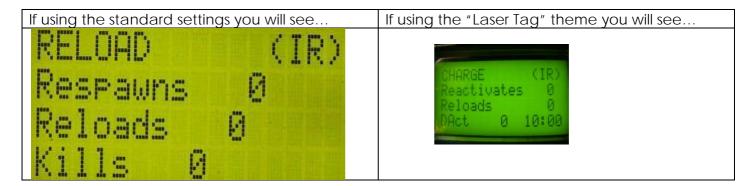

On the third line of the display, it shows the number of reloads performed this game. This is a useful feature for some games where the amount of spare ammunition is limited.

### 3.7.3 Pause Mode (IR)


A SATR unit in live state can be paused from the Master Controller using this mode.

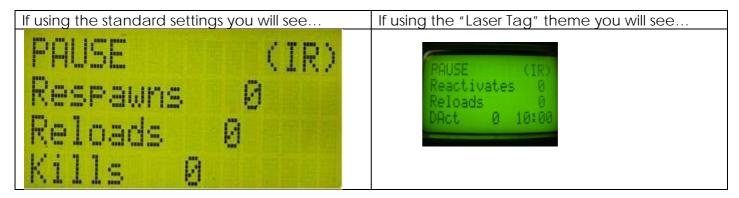

Pausing prevents the gamer from performing any actions with the gun until it receives a resume signal in IR or radio form.

### 3.7.4 Resume Mode (IR)

This works on a SATR unit that is currently paused and resumes the target units operation.

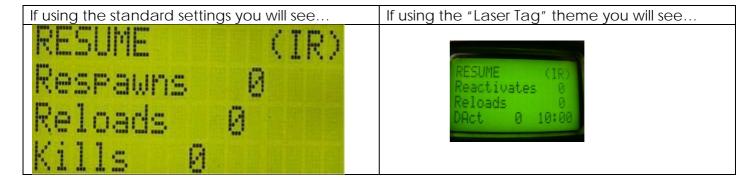

# 3.7.5 Target Reset (IR)

This function is available from version 1.1b or later of SATR software. A target gaming gun will have the following settings reset to factory defaults:

- Muzzle Flash: White
- Hit Light: Red
- Default weapon emulation for the gun class
- Default Range
- Outdoor mode
- Voice Feedback On
- High Volume
- Friendly Fire On
- Battle this sets the battle to the same battle as the Master Controller.

The purpose of this function is to set the units back to a working set of defaults before then changing the settings to suit the next Live-Play.


Please note the language setting is not changed by the target reset function.

If you are using the Laser Tag theme the target reset function works in a slightly different way. It enables you to automatically set half of your equipment to Team A and the other half to Team B.

Set half the group to	And the other half
Resets the 'Tagged' phasers to the defaults for Team A; Red muzzle, Red hit light, Team A,	Resets the 'Tagged' phasers to the defaults for Team B; Green/Blue muzzle, Green/Blue hit light, Team B, Game 1  LASER TAG B (IR) Reactivates B Reloads B DAct 0 10:00


# 3.7.6 Kill/Deactivate (IR)

The kill function is a quick way to move a target SATR unit into a dead state. This is for those times that a referee is acting in a non gamer role of some very destructive weapon such as artillery or automated defence system. Any SATR unit currently alive that receives the infrared kill signal instantly "dies".

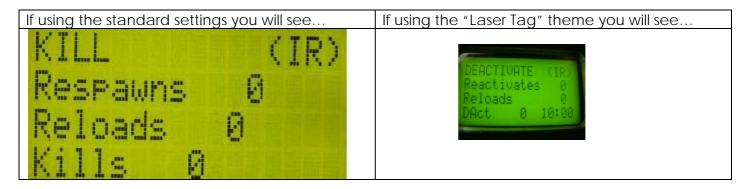

# 3.7.7 New Mission (IR)

The "New Mission (IR)" function resets a target SATR unit into a live state ready for a new game using the infrared system.

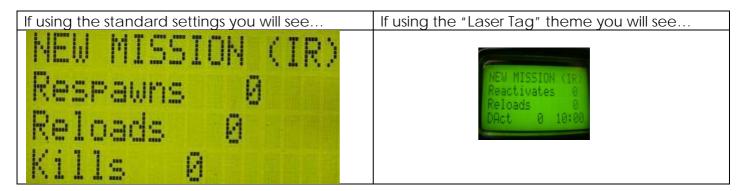

All the statistics on the target unit are reset. A new mission IR does not restart the game timer on the master controller unlike the Start (Radio) function. If a gaming gun fails to start with the initial start radio function and timed games are being used then use New Mission IR to start those gaming guns.

### 3.7.8 Set Volume


The volume of target gaming guns can be changed. First select the Set Volume command with the trigger, then specify the volume, trigger pull and finally with the CHG Volume (IR) command shoot all the target gaming guns to set the sound volume.

### 3.7.9 Jam Weapon (IR)

This command sends all target gaming guns into Jam state. They will need to use the reload button to unjam the weapon. This command is mostly for military training exercises.

# 3.7.10 Sensor Test (IR)

The purpose of this function is to test the target unit sensors to make sure they are receiving hits and processing the radio feedback to the initiating unit.

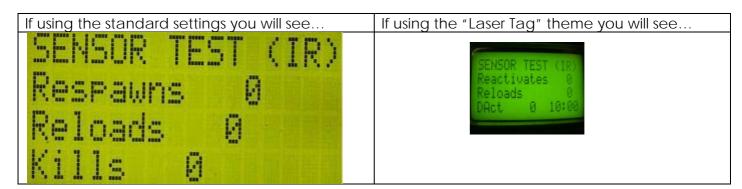


The head sensor on the target will flash when it receives an infrared message and the Master Controller will make a short beep sound indicating that is had received a successful radio message from the target unit.

The sensor test process can occur regardless of the state of the gaming guns except if the target unit is turned off.

# 3.7.11 Shoot/Tag (IR)

The Master Controller can shoot at a target SATR unit. The target SATR unit will process the hit exactly the same as if it was hit by another SATR unit.

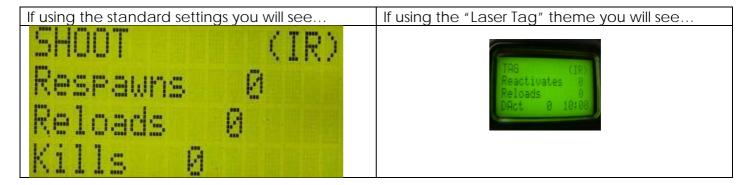

### **3.7.12** Pause (Radio)

All currently active units within radio range in the battle currently configured for this Master Controller will pause upon receipt of this radio message.




### 3.7.13 Resume (Radio)

All currently paused SATR units within radio range in the same battle as this Master Controller will resume upon receipt of this signal.



### 3.7.14 Start Game (Radio)

Any SATR units within radio range, on the same battle as the Master Controller currently in "game over" state will commence 3 second count down and the go to live game status.

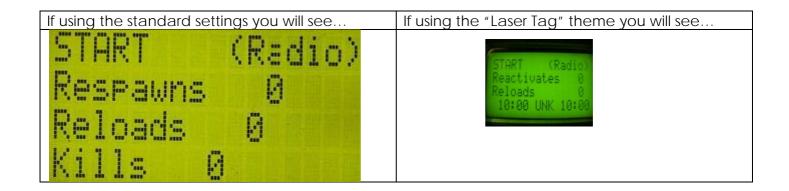


If the master controller is set to a timed game, a start game command will start the time countdown. Gaming guns in RF range of the master controller will also start or re-start the game timer countdown which is displayed on the bottom right of the LCD.

The start function needs to be confirmed by the user before taking effect.

### 3.7.15 End Game (Radio)

All SATR units within radio range on the same battle as the Master Controller that is currently active will go to "game over" state. Game over state continues to display the statistics on the LCD but otherwise all functions are disabled.

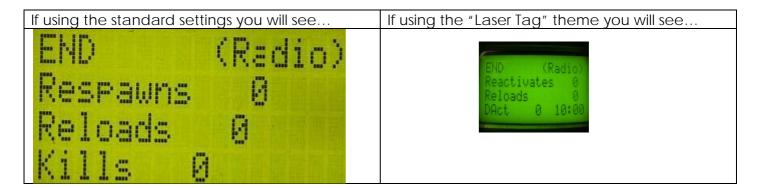

The end function needs to be confirmed by the user before it takes effect.

### 3.7.16 CIr Stats (Radio)

This command resets the accumulate game statistics including game and more importantly session stats back to zero values without having to restart each gaming gun with a key. If gaming guns are handed out to the gamers before the first game for them to have some fun shooting each other; then before you start a new game make sure you issue a Clr (clear) Stats command. Note that this command has to be confirmed before taking effect.

This command should also be used if a new group is starting up after another group had the same gaming guns and the gaming have not been turned off.

### 3.7.17 Interrogate IR

This function is used to obtain key configuration and statistical information from the device targeted by an infrared message. This is a really useful function.

With this function you can get the stats of the player you 'Shoot' or 'Tag'. On your screen you will get their HP #/5, Accuracy, how many people they have tagged and deactivated.


The target is determined by infrared however the statistical information is sent back to the master controller by digital radio.

#### 3.7.18 Set Health

This function changes the hit points of the target gun using the infrared system to the value specified after "HP". To change the value the "set health" function is used. The target gaming gun sensor lights will flash to indicate message received.

The sequence is "SET HEALTH", then specify the hit points, then point the master controller at the target gaming guns and use the "CH Hth XXHP (IR)" function

A setting of 'Invulnerable" health means the target SATR unit can take unlimited hits without dying.

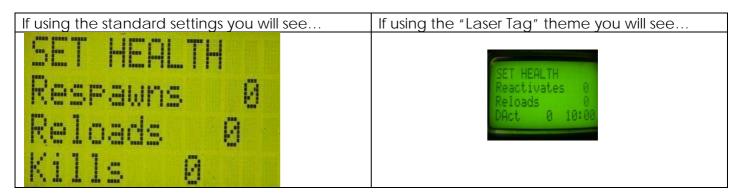

## 3.7.19 Set Difficulty

This function uses the infrared system to change target gaming guns to the specified difficulty level. The target gaming gun sensor lights will flash to indicate message received. The difficulty level is specified using the "Set Difficulty" function.



Changing the difficulty level also resets the hit points to the default value for that difficulty level. If you want use the Master Controller mode to change the hit points and the difficulty level where the hit points are different from the default, then change the difficulty level first and then change the hit points.

#### 3.7.20 **Set Game Timer**

SATR allows the operator the set time that a particular battle/game will run for before it automatically ends. The time starts when a Start (Radio) command is performed. At the end of the time, the master controller will automatically send an End (Radio) command. If a timed game is used the time left in the game is displayed on the master controller and each gaming gun/phaser assigned to this battle/game.

#### 3.7.21 **Set Battle**

This function allows the referee to quickly change a target SATR unit to operate in 0 10:00 a new battle/game. The first step is to specify the battle and then use the trigger to go to the CHG BATTLE X command. The CHG BATTLE command is an infrared function so it only effects those gaming guns hit.

#### 3.7.22 **Set Team**

A master controller can be used to set the team value of a target gaming gun by IR.

"Set FF On" - Turns on friendly fire so that gamers from the same team can hit each other.

"Set Team A" - All gaming guns hit with the IR beam will be set to team A. Team A gaming guns cannot hit other team A gaming guns.

"Set Team B" – Sets target gaming guns to team B.

It is very important to not mix friendly fire ON with gaming guns set to a team.

#### Chg Weapons (IR)/Chg Phasers (IR) 3.7.23

The change weapons function sets the weapon on the target gaming gun based on two factors:

- 1) The Gun Class of the target gaming gun (Handgun, Sub machinegun, Rifle and Machinegun).
- 2) The weapon specified on the Master Controller in each class using the "Set Weapons" function.

For example if the Master Controller current settings for weapons in each class was

- Handgun: 9mm Makarov
- Sub machinegun: PPS-43
- Rifle: AK47/AKM
- Machinegun: RPK LMG

And the target guns current gun class is Rifle, then it will change to a AK47/AKM as the current weapon. If no weapons have been set since the last boot of the Master Controller, then the default settings will apply: The target gaming gun sensor lights will flash to indicate message received.






### 3.7.24 Set Weapons/Set Phasers

The SATR unit configured as a Master Controller can use the infrared system to establish a specific weapon for each gun class. The principle is SATR when installed into a case will have the Gun Class configured so that the selection of weapons is consistent with the case shape. However when running a Live-Play each team might be assigned a particular model of gun class, for example for a World War II Soviet force the following could be used:

- All handguns become Tokarev TT-33's
- All submachine guns become PPS 43's
- All rifles become Mosin-Nagant Rifles
- All machine guns become Degtyarev DP LMG's



Step 1: Select the function "Set Weapons" and then pull the trigger.

**Step 2**: Select the gun class you wish to change by using the reload/mode buttons followed by a trigger pull. The display shows the gun class and the current weapon that the unit target unit in this gun class will change to.

**Step 3**: Select the weapon from the list and then pull the trigger.

The trigger pull will bring up the next gun class

Repeat steps 2 and 3 to set a weapon for each gun class. Selection of a machine gun with the trigger pull will take you back to the main menu at "Set Weapons". A left button push on the gun class selection when machine gun is currently listed will also return you to the "Set Weapons" menu option.

### 3.8 Master Controllers in Hire Mode.

A master controller can be placed into hire mode which reduces the number of functions down to a minimum. The functions the master controller can perform in hire mode are:

- Spawn (reactivate)
- Set Volume
- End Game
- Start Game
- Set Game Timer
- Clear Stats (resets of the game and session statistics accumulated by the players)

## 3.9 Battle Box (Medic Box)

After initial boot go the right menus and work through until it says "weapon mode", then change this to "medic box" and then just keep pulling the trigger.

Once in a live state the medic box, the medic box will only accept the trigger button input, causing it to transmit a re-spawn signal to gaming guns nearby and in direct infrared line of sight.

### November 8, 2013 [USER GUIDE FOR SATR CODE V1.6A+]

The reload and mode buttons are disabled so the gamers cannot access any other function, it will only perform re-spawns. The medic box will count the number of re-spawns it performs by using the radio feedback system, up to 3 people can be spawned at a time and get fairly accurate counting. Medic box can be easily re-configured to work as an ammunition box.

The medic box will reset the counter for number of spawns after received a radio end/start combination. A medic box allows the number of re-spawns to be restricted to a specific count nominated by the referee on initial boot or the referee can set it to re-spawn for a certain number of minutes or it can remain unrestricted like 1.2e. Any gaming gun or Master Controller can also be configured to work as a medic box.

#### **TEAM SPECIFIC RE-SPAWNS**

Assuming all gaming guns are upgraded to 1.3a or later software, the medic box can be configured to only re-spawn a specific team. If you set the medic box to team A, it will only respawn gaming guns also on team A. This only applies if you have friendly fire off.

#### **CONFIGURING FIXED NUMBER OF RESPAWNS**

On initial boot with key switch go to the right button menus, scroll through the list and make sure the current mode says "Medic Box" rather than something else like "weapon mode", "Controller mode", "Ammunition box", "Claymore Mine", "Normal Mine" or "Dirty Mine".

After trigger push (pull on a gaming gun) the heading will say "Medic Box Type". Scroll through list using left or right button until it says "Limited Respawns" and then push trigger button. Use the left/right buttons to specify a number of respawns. Finally keep triggering through until the unit fully boots with a heading of "MEDIC" Battle x" where x is the battle this medic box is assigned to.

### **CONFIGURING FIXED TIME RESPAWNS**

This is very similar to configuring fixed number of re-spawns. Go to the "Medic Box Type" and make sure it says "Time Limited", push the trigger button and then use the left/right buttons to change the value in minutes. Allowable values are:

- 1 to 30 select individual minutes, e.g. 4 or 12 or 15 etc
- From 30 select minutes in increments of 5, e.g. 35, 50, 55 etc
- From 60 select minutes in increments of 10, e.g. 70, 80, 100 up to a maximum of 120.

### 3.9.1 Medic Box in Hire Mode

All the menus are locked out except on boot the number of respawns can be specified and the team the box is assigned too can also be specified.

### 3.10 Domination Box

Boot up the gaming gun, push the black button. Work through until it says "weapon mode" this is the first option in "device role". Press the red button to scroll through the options until you see "domination box". You can select the intervals of the SFX:

- 60 seconds
- 30 seconds
- 15 seconds
- 5 seconds
- Disabled (i.e. no sound effects)

If the box was set to a Domination Box on its last start, then just turn the key and press the green button for go: you will hear "mission start".

# 4 APPENDIX – SATR Weapon Emulation Chart

# 4.1 GUN CLASS #1 - Handguns

Weapon	Box Capacity	Fire Modes	Recoil	ROF	Range	Reloads	Reload Time	Jam Rate	Origin	Notes
Colt M-1911*	7	AL	3	180	Short	20	(Secs)	3	USA	The Colt M-1911 Automatic Pistol, has a 7 round box, is short ranged, comes with 20 boxes of .45ACP ammunition and takes 3 seconds to reloadThis was the standard US army service sidearm from 1911 until mid 1980s. The M-1911 served with distinction proving to be extremely reliable in harsh combat conditions.
Beretta 92FS (M9)	15	AL	2	180	Short	11	3	1	Italy	The Beretta FS Automatic Pistol, has a 15 round box, is short ranged, comes with 11 boxes of 9mm Parabellum ammunition and takes 3 seconds to reload. Production of Beretta 92 commenced in 1976 in Italy. The US military adopted the Model 92SB-F (later renamed to model 92FS) in 1985 as the M9 pistol.
Browning GP35 - HP	13	AL	2	180	Short	12	3	1	Belgiu m	The Browning HP35 Automatic Pistol, has a 13 round box, is short ranged, comes with 12 boxes of 9mm Parabellum ammunition and takes 3 seconds to reload. The Browning High Power has been widely used and copied with over 55 countries adopting it. Has proved very reliable and serviceable pistol. In WWII the German used it as Pistole 640(b).
H&KUSP Match	15	AL	2	180	Short	11	3	2	Germa ny	The Heckler & Koch USP Match Automatic Pistol, has a 15 round box, is short ranged, comes with 11 boxes of 9mm Luger ammunition and takes 3 seconds to reload. Heckler & Koch developed Universal Self-loading with manufacturing commencing in 1993. The concept of the new design was to provide a universal weapon for police and military forces, available in a variety of versions and sizes.
9mm Makarov	8	AL	2	180	Short	18	3	1	Russia	The Makarov Automatic Pistol, has an 8 round box, is short ranged, comes with 18 boxes of 9mm

# November 8, 2013 [USER GUIDE FOR SATR CODE V1.6A+]

										Soviet ammunition and takes 3 seconds to reload. The Makarov appeared in the 1950's and is based on the Walther PP, it was the standard issue side arm of the Russia forces until 2003. Widely used by many Warsaw pact countries.
Tokarev TT-33	8	AL	2	180	Short	18	3	1	Russia	The Tokarev TT-33 Automatic Pistol, has a 8 round box, is short ranged, comes with 18 boxes of 7.62 Soviet ammunition and takes 3 seconds to reload. The Tokarev TT (aka "Tula") pistol was developed for the red army as a new, modern semiautomatic pistol to replace obsolete Nagant M1895 revolvers. The TT-33 was used by the Soviet military from 1934 to the late 1960's.
Luger Pistole '08'	8	AL	2	180	Short	18	3	2	Germa ny	The Luger Automatic Pistol has an 8 round box, is short ranged, comes with 18 boxes of 9mm Parabellum ammunition and takes 3 seconds to reload. The luger was the standard issue German sidearm during WWI and saw frequent service until 1945. The last Luger was made in June 1942
Walther P38	8	AL	2	180	Short	18	3	2	Germa ny	The Walther P38 Automatic Pistol has an 8 round box, is short ranged, comes with 18 boxes of 9mm Parabellum ammunition and takes 3 seconds to reload. The Carl Walther company began development of the new military pistole in the mid-1930s, and in 1938 the Werhmacht (German Army) adopted Walther MP model experimental pistole as "Pistole 38". The P38 was the standard issue German sidearm in WWII.
Nambu 14 Shiko	8	AL	2	180	Short	18	3	8	Japan	The Nambu 14 Shiko Automatic Pistol has an 8 round box, is short ranged, comes with 18 boxes of 8mm ammunition and takes 3 seconds to reload. The type 14 pistol was designed by Japanese general Kijiro Nambu in 1925. This pistol was adopted by Imperial Japanese Army and widely used throughout WWII as the standard sidearm.
Smith & Wesson M & P	6	RV	2	180	Short	22	7	1	USA	The Smith & Wesson M&P Revolver has a 6 shot cylinder, is short ranged, comes with enough spare bullets to reload 22 times, and takes 7 seconds to

										reload. Ammunition is the 0.38 Special. The Smith & Wesson's "Military And Police" Revolver began production in 1899. During the next century, the total number revolvers manufactured by Smith & Wesson could be estimated at roughly six million including over 1 million guns delivered to the US Government in WWII.
Nagrant M-1895	7	RV	2	180	Short	20	6	2	Russia	The Nagrant M-1895 Revolver has a 7 shot cylinder, is short ranged, comes with enough spare bullets to reload 20 times and takes 6 seconds to reload. Ammunition is 7.62mm Russian. The Nagant revolver was adopted by the Russian Army in 1895 and were manufactured in Tula Arsenal until the late 1930's.
Enfield Revolver	6	RV	2	180	Short	18	7	2	UK	The Enfield Revolver has a 6 shot cylinder, is short ranged, comes with enough spare bullets to reload 18 times, and takes 7 seconds to reload. Ammunition is .38 British. This revolver was developed at the Royal Small Arms Factory in Enfield between 1926 and 27. This revolver was adopted for Her Majesty's Military service in 1932 as the Enfield revolver, .38 caliber, No.2 Mark 1.

<sup>\*</sup>Autoloader (AL) pistols get an addition 1 round in the first magazine to represent the round pre-loaded into the chamber

## 4.2 GUN CLASS #2 – Sub Machine Guns

Weapon	Magazine capacity	Fire Modes	Recoil	ROF	Range	Reloads	Reload Time	Jam Rate	Origin	Notes
Scorpion	25	FA,SA	2	330	Short	15	5	2/2	N/A	The Scorpion has been a standard Battlefield Sports gaming gun since 2004. It is designed to function as typical sub machine gun. It has a more science fiction shooting sound.
H&K MP5	30	FA,SA	2	M	Short	6	3	1/2	Germa ny	The Heckler & Koch MP5 submachine gun, features a 30 shot magazine, is capable of fully automatic and semiautomatic fire, has short range, has 6 spare magazines of 9mm Parabellum ammunition and takes 3 seconds to reload. The MP-5, is one of the most famous and wide-spread firearms of its class. Production commenced in 1965.
H&K MP5 SD	15	FA,SA	2	M	Short	12	5	1/2	Germa ny	The Heckler & Koch MP5SD submachine gun, features a 15 shot magazine, is capable of fully automatic and semiautomatic fire, has short range, has 6 spare magazines of 9mm Parabellum ammunition and takes 3 seconds to reload  MP5SD was introduced in 1974. It has an integrated suppressor and a special barrel which reduced the muzzle velocity of its ammunition to just below the speed of sound. It is almost
										inaudible at distances of more than 15 meters. The muzzle flash is virtually invisible. It is a weapon of choice for stealthy operations. The longer reload time reflects the lower reliability of silenced weapons.
UZI	25	FA,SA	2	M	Short	8	3	.5/1	Israel	The UZI submachine gun features a 25 shot magazine, is capable of fully automatic and semiautomatic fire, has short range, has 8 spare magazines of 9mm Parabellum ammunition and takes 3 seconds to reload. The UZI was designed in Israel by namesake Uziel Gal, and manufactured by IMI. The UZI has been adopted by police and military of more than 90 countries,

										including Israel, Germany and Belgium.
M-1928A1 Thompson	100	FA,SA	2	M	Short	4	12	5/10	USA	The Thompson submachine gun features a huge 100 shot drum, is capable of fully automatic and semiautomatic fire, has short range, has 4 spare drums of .45ACP ammunition and takes 12 seconds to reload. Tommy guns were used by both Police and criminals to spread death in the 1920's. This gun was also widely used during WWII and later in the Korean war.
M-3 Grease Gun	30	FA	2	450	Short	6	4	12	USA	The M3 submachine gun features a 30 shot magazine, fires fully automatic only, has short range, has 6 spare magazines of .45ACP ammunition and takes 4 seconds to reload. The M3 submachine gun was also known as the Grease gun. The M3 was developed and manufactured by General Motors Corp. The M3 was introduced in 1942, and a simplified M3A1 launched in 1944. It remained in service in the USA until 1960.
Owen SMG	33	FA	2	M	Short	6	4	5	Austral ia	The Owen submachine gun features a 33 shot magazine, fires fully automatic only, has short range, has 6 spare magazines of 9mm parabellum ammunition and takes 4 seconds to reload  About 45 000 Owen SMGs were made in Australia from 1942. These remained in service with Australian forces until the 1960s. These weapons were well liked by soldiers due to their
Sten Mark 2	32	FA	2	450	Short	6	4	5/5	UK	robustness, reliability and simplicity.  The Sten Mark 2 submachine gun features a 32 shot magazine, fires fully automatic only, has short range, has 6 spare magazines of 9mm parabellum ammunition and takes 4 seconds to reload  It was one of the most crude and ugly SMG designs of WWII . But more than 4 million STEN's of different versions were made from

# November 8, 2013 [USER GUIDE FOR SATR CODE V1.6A+]

										1941 until 1945.
MP38/40	32	FA	2	500	Short	6	3	4	Germa ny	The MP38 submachine gun features a 32 shot magazine, fires fully automatic only, has short range, has 6 spare magazines of 9mm parabellum ammunition and takes 3 seconds to reload. The MP-38 and later MP-40 were adopted by the Wehrmacht in 1938 and 1940, respectively. The MP40 was often incorrectly called the <b>Schmeisser</b> by the Allies, after Hugo Schmeisser who produced the guns' magazines. Some 1.2 million MP-38 & 40s were manufactured prior to and during WWII. Initially, the MP-38 was intended for use by paratroopers, but later was widely used by the German infantry.
MP18	32	FA	2	400	Short	6	8	4	Germa ny	The MP18 submachine gun features a 32 shot helical drum, fires fully automatic only, has short range, has 6 spare drums of 9mm Parabellum ammunition and takes 8 seconds to reload. The rate of fire is only 400 RPM.  This is the world's first successful submachine gun. The MP18 saw action in WWI with 30,000
										manufactured. The high reload time reflects the difficulty with the snail drum fed rounds.
MP28-50	50	FA,SA	2	500	Short	5	8	4	Germa ny	The MP28 submachine gun features a 50 shot magazine, is capable of fully automatic and semiautomatic fire, has short range, has 5 spare magazines of 9mm Parabellum ammunition and takes 8 seconds to reload.
										The MP 28/II is a direct descended of the MP18/I with the primary improvements being selective fire and faster rate of fire. The long reload time reflects the high chance of jamming.
MAT 49-20	20	FA,SA	2	404	Short	9	3	4	French	The MAT49 submachine gun features a 20 shot magazine, is capable of fully automatic and semiautomatic fire, has short range, has 9 spare magazines of 9mm Parabellum ammunition and

										takes 3 seconds to reload.
										The MAT-49 submachine gun was developed at the French state arms factory "Manufacture Nationale d'Armes de Tulle" in the late 1940s, and was adopted French Army in 1949. First batches were made in 1950, and production continued until 1979.
MAT 49-32	32	FA	2	M	Short	6	4	4	Vietna m	The North Vietnamese MAT49 SMG is a simplified version of the French model, it features a 32 shot magazine, fires fully automatic only, has short range, has 6 spare magazines of 7.62mm Soviet ammunition and takes 4 seconds to reload.  The MAT-49 saw widespread combat use during
										the <u>Indo-China</u> war.
										After French forces left Indochina, the NVA converted many captured MAT-49s to the Soviet Tokarev pistol cartridge, then available in large quantities from the Soviet Union and the People's Republic of China.
PPS-43	35	FA	2	M	Short	6	4	3	Russia	The PPS-43 submachine gun features a 35 shot magazine, fires fully automatic only, has short range, has 6 spare magazines of 7.62mm Soviet ammunition and takes 4 seconds to reload.
										The PPS-42 launched in 1942 and was further refined in 1943 to become the PPS-43. Many consider the PPS-42 the best SMG of WWII; it was widely exported to pro-Soviet regimes around the world and widely copied.
PPSch-41	71	FA	2	M	Short	4	10	5	Russia	The PPSch-41 submachine gun features a 71 shot Suomi drum, fires fully automatic only, has short range, has 4 spare drums of 7.62mm Soviet ammunition and takes 10 seconds to reload.
										The PPSch-41, Pistolet Pulemjot Schpagina model of 1941 was one of major infantry weapons of the Soviet troops during WWII.

										More than 6 million we made. The PPSch 41 was widely exported to some pro-Soviet countries, including Vietnam and many African countries. The 71 round drum provides a lot of firepower but is slow to reload.
FN P90	50	FA,SA	3	M	Mediu m	4	4	1	Belgiu m	The P90 personal defense weapon, features a 50 round magazine, supports both fully automatic and semiautomatic fire, has medium range, has 4 reloads of 5.7mm FN ammunition and takes 4 seconds to reload.
										The FN P90 was developed in the late 1980s as a defensive weapon for the troops whose primary activities do not include small arms. Troops such as vehicle, tank & artillery crews. Standard Pistols and SMGs chambered for pistol rounds had proven ineffective against enemy soldiers, wearing bulletproof vests, so FN developed a new round with enhanced penetration - the SS190.

### 4.3 GUN CLASS #3 - Rifles

Weapon	Magazine capacity	Fire Modes	Recoil	ROF	Range	Reloads	Reload Time	Jam Rate	Origin	Notes
Commando	30	FA,SA	2	330	Mediu m	12	5	3/3	N/A	The Commando has been the standard issue carbine by Battlefield Sports since 2004. It is designed to function as a typical modern carbine.
Pulse Rifle	30	BF,SA	3	330	Long	12	5	2/2	N/A	The classic Pulse Rifle has been manufactured for live gaming since 2002 by Battlefield Sports. It is simulates a typical heavy assault rifle.
M16A2	30	BF,SA	2	M	Long	6	3	2/2	USA	The M16A2 combat rifle features a 30 shot magazine, both burst and semiautomatic fire, long range, 6 spare magazines of 5.56mm NATO ammunition and takes 3 seconds to reload
										The M16A2 became the general issue rifle with the US armed forces in 1985. The action was modified, replacing the fully-automatic setting with a three-round burst.
										The M16 rifles are used by many foreign military groups, most notably the British SAS, who preferred the M16 over the infamous L85A1 rifle.
M16A1 -1970	30	FA,SA	2	M	Long	6	3	3/5	USA	The M16A1 assault rifle features a 30 shot magazine, both automatic and semiautomatic fire, long range, and has 6 spare magazines of 5.56mm NATO ammunition and takes 3 seconds to reload.
										The M16A1 was the general-issue rifle with the US Armed forces from 1970. This model featured a larger magazine from its predecessor. Improved ammunition and cleaning significantly reduced jamming compared to the earlier issued equipment.
M16 - 1967	20	FA,SA	2	M	Long	8	5	4/8	USA	The M16 assault rifle features a 20 shot magazine, supports both automatic and

										semiautomatic fire, has long range, has 8 spare magazines of 5.56mm NATO ammunition and takes 5 seconds to reload.  The initial version was fielded by the US Armed Forces in the early 1960s. The early version which saw action in Vietnam only had a 20 round magazine. Reload time is increased to simulate the high risk of jamming.
Colt Commando	20	FA,SA	2	M	Mediu m	8		5 2/3	USA	The Colt Commando features a 20 shot magazine, supports both automatic and semiautomatic fire, has medium range,has 8 spare magazines of 5.56mm NATO ammunition and takes 5 seconds to reload
										A carbine version M16 assault rifle appeared under the name of CAR-15 in 1965, and was intended for the US Special Forces who fought in Vietnam. In mid-1967 Colt slightly upgraded the Commando by lengthening the barrel up to 11.5 inches, and this version was adopted as XM-177E2.
M14 Rifle	20	SA	3	M	Long	8	3	2	USA	The M14 Rifle features a 20 shot magazine, has semiautomatic fire only, has long range, has 8 spare magazines of 7.62mm NATO ammunition and takes 3 seconds to reload
										The M14 Rifle was adopted by the US Military as the general issue rifle in 1957 until its replacement by the M16. Most M14 Rifles permitted semiautomatic fire only to avoid overheating the barrel.
M24 Sniper Rifle	6	BA	3	45	Long	20	3	0	USA	The M24 Sniper Rifle is a bolt action rifle with a 6 shot box, has long range, has 20 spare boxes of 7.62mm NATO ammunition takes 3 seconds to reload.
										The Remington M24 is the standard sniper rifle in the US military. First shipments commenced in 1987.

Simonov Carbine SKS	10	SA	2	M	Long	25	5	3	Russia	The Simonov Carbine has a 10 shot magazine and fires in semiautomatic only, has long range, has 25 spares magazines of 7.62mm Soviet ammunition and takes 5 seconds to reload.  A very simple, easy to operate automatic loading
AK47/AKM	30	FA,SA	2	M	Medium	6	3	.5/.5	Russia	carbine widely used in communist countries.  The AK47 assault rifle features a 30 shot magazine, supports both automatic and semiautomatic fire, has medium range, has 6 spare magazines of 7.62mm Soviet ammunition and takes 3 seconds to reload.
										The Kalashnikov assault rifle, also known as the AK-47, or simply "the AK" is the most prolific small arm since WWII. The total number of the AK-type rifles made worldwide is estimated at 90+ million. This is a true legendary weapon, known for its extreme ruggedness, simplicity of operation and maintenance, and unsurpassed reliability even in worst conditions.
AK74	30	FA,SA	2	M	Long	6	3	.5/.5	Russia	The AK74 combat rifle features a 30 shot magazine, supports both automatic and semiautomatic fire, has long range, has 6 spare magazines of 5.45mm Russian ammunition and takes 3 seconds to reload.
										At the present time the AK-74M, along with the earlier AK-74 and AKS-74 is the standard issue rifle of the Russian Army. The AK74 is a heavily updated AKM which uses a smaller caliber, high velocity round.
Dragunov SVD	10	SA	3	30	Long	19	3	1	Russia	The Dragunov sniper rifle has a 10 shot magazine and fires in semiautomatic only, has long range, has 19 spare 7.62mm Russian magazines and takes 3 seconds to reload.
										In 1963 the SVD (Snaiperskaya Vintovka Dragunova) was accepted by the Soviet Military. The SVD has seen much action and passed all

# November 8, 2013 [USER GUIDE FOR SATR CODE V1.6A+]

										combat tests including service in Vietnam, Afghanistan and the Chechen conflict.
M-1903 Rifle	5	BA	3	30	Long	25	3	.5	USA	The M-1903 is a bolt action rifle with a 5 shot box, has long range, has 25 spare .3 inch M1903 ammunition boxes and takes 3 seconds to reload.  The M1903 rifle is a manually operated, rotating bolt, magazine fed rifle. M1903 saw service in WWI and WWII.
H&K G3	20	FA,SA	3	500	Long	8	3	1/1	Germany	The Heckler & Koch G3 assault rifle features a 20 shot magazine, is capable of fully automatic and semiautomatic fire, has long range, has 8 spare magazines of 7.62mm NATO ammunition and takes 3 seconds to reload.
										In 1959 the Bundeswehr adopted the Heckler & Koch rifle as the G3. Until 1995 the G3 in various modifications served as a general issue shoulder weapon not only for German Armed forces, but also for many other countries.
M1 Garand	8	SA	3	M	Long	25	3	.5	USA	The M1 Garand rifle features an 8 shot internal box, has semiautomatic fire only, has long range, has 25 spare .30 M1906 ammunition and takes 3 seconds reload.
										M1 Garand was the most widely used semi- automatic rifle of WWII amongst US forces. The M1 Garand was also used in the Korean war and the early stages of the Vietnam war.
M1 Carbine	15	SA	2	M	Medium	12	3	.5	USA	The M1 Carbine features a 15 shot magazine, has semiautomatic fire only, has medium range,has 12 spare .30 M1906 ammunition and takes 3 seconds reload.
										Winchester delivered its first carbines to the US Military in July, 1942. During the period from 1942 till 1945 more than 6 million carbines were manufactured.
M2 Carbine	30	FA,SA	2	M	Medium	6	3	.5/4	USA	The M2 Carbine features a 30 shot magazine, fires both automatic and semiautomatic, has

										medium range, has 6 spare magazines of .30 M1906 ammunition and takes 3 seconds to reload The M2 was an improved, selective-fire version of the M1. It also had a larger 30 round magazine. Its lack of effectiveness at long range was its primary drawback compared to many other assault rifles.
Lee-Enfield SMLE	10	BA	3	30	Long	19	3	.5	UK	The Lee-Enfield SMLE is a bolt action rifle with a 10 shot box, has long range, has 19 spare .303 British ammunition boxes and takes 3 seconds to reload.
										Various versions of the Short, Magazine, Lee- Enfield were issued to the British Army from 1903 to the mid 1950's. The weapon proved reliable and accurate with a high rate of fire for bolt action rifles of the period.
Mosin-Nagant Rifle	5	BA	4	30	Long	25	3	1	Russia	The Mosin-Nagant is a bolt action rifle with a 5 shot box, has long range, has 25 spare 7.62mm Soviet ammunition boxes and takes 3 seconds to reload.
										The Mosin-Nagant rifle, known in Russia as a "Vintovka Mosina", was officially adopted for service by the Russian Tsar in 1891. Production of this rifle continued until 1948. The rifle in was the standard military arm of the Russian and the Red army for some 60 years.
Steyr AUG	30	FA,SA	2	M	Long	6	3	1/2	Austria	The Steyr AUG rifle features a 30 shot magazine, has both automatic and semiautomatic fire, has long range, has 6 spare magazines of 5.56mm NATO ammunition and takes 3 seconds to reload.
										The Steyr (Armee Universal Gewehr – in other words the Universal Army Rifle) was adopted by the Austrian Army in 1977, as the Stg.77
										The Steyr AUG has been used by many armed forces including Australia, Austria, New Zealand,

# November 8, 2013 [USER GUIDE FOR SATR CODE V1.6A+]

										Oman, Malaysia, Saudi Arabia and, Ireland.
FN-FAL/L1A1 SLR	SAL/L1A1 SLR 20 SA	SA	3	M	Long	10	3	5	Belgium	The FN FAL features a 20 shot magazine, has semiautomatic fire only, has long range, has 10 spare magazines of 7.62mm NATO ammunition and takes 3 seconds to reload.
										The FN Fusil Automatique Léger (light automatic rifle) or FAL was first adopted as the C1 in 1955. Belgium adopted the rifle in 1956 and Britain in 1957 as an L1A1 SLR (Self-loading rifle). It is often issued with 4X SUIT optical scopes. The FN FAL was widely adopted until the 1990s.
L85A1-2 /SA80	30	FA,SA	2	M	Long	6	5	2/4	UK	The L85A1 combat rifle features a 30 shot magazine, fires both automatic and semiautomatic, has long range, has 6 spare magazines of 5.56mm NATO ammunition and takes 5 seconds to reload.
										The British army adopted the L85A1 for the Falkland war in 1984. Originally L85A1s were quite unreliable and troublesome to handle and maintain. The long reload time reflects the high chance of stoppages.
H&K G36	30	FA,SA	2	M	Long	6	2	1/1	Germany	The Heckler & Koch G36 combat rifle features a 30 shot magazine, fires both automatic and semiautomatic, has long range, has 6 spare magazines of 5.56mm NATO ammunition and takes 2 seconds to reload.
										The H & K G-36 is the service rifle of the German Armed Forces. It was adopted by the Bundeswehr in 1995 and the Spanish Army in 1999. The guns have a distinctive translucent plastic magazine which is fitted with studs to allow magazines to be clipped together easily which enables faster reloading. A 100-round drum magazine can also be attached.
MP-43 Mp-44 Stg.44	30	FA,SA	2	500	Medium	6	4	1/2	Germany	The MP-43 assault rifle features a 30 shot magazine, fires both automatic and semiautomatic, has medium range, has 6 spare magazines and

										takes 4 seconds to reload.  The world's first assault rifle was developed in Hitlers' Germany during WW2. The total number of MP-43s, MP-44s and StG.44s produced was about 500 000. And these rifles proved very effective in combat.
Kar 98K	5	BA	4	30	Long	25	3	.5	Germany	The Kar 98k is a bolt action rifle with a 5 shot box, has long range, has 25 spare 7.92 Mauser M98 ammunition boxes and takes 3 seconds to reload.  The Kar 98k was the standard German Army rifle of WWII. This Bolt Action Rifle while largely obsolete proved to be reliable and strong.  Manufacturing of this rifle continued throughout the war.
Musket	1	SS	4	30	Long	30	19	15		This is typical example of a pre 20 <sup>th</sup> century musket. It is capable of a maximum of firing 3 rounds per minute. It has long range for the period.

## 4.4 GUN CLASS #4 - Machine Guns

Weapon	Magazine capacity	Fire Modes	Recoil	ROF	Range	Reloads	Reload Time	Jam Rate	Origin	Notes
Morita	99	FA,SA	2	400	Long	6	10	1/2	N/A	The Morita is the standard issue gaming gun representing a typical light machine gun from Battlefield Sports. The Morita has been in continuous manufacture since 2002.
FN Minimi / M249	200	FA	2	M	Long	7	6	1	Belgiu m	The Minimi light machine gun features a 200 shot belt, fires fully automatic only, has long range, has 7 spare belts of 5.56mm NATO ammunition, and takes 6 seconds reload.
										The Minimi light machine gun was developed by FN Herstal. Mass production began in 1982 in Belgium. About the same time it was adopted by the US Armed forces as the M249 Squad Automatic Weapon (SAW). The Minimi is used by many western allied countries. The longer reload time reflects time it takes to let the barrel cool down and then change.
M60 GPMG	100	FA,SA	2	550	Long	7	8	4	USA	The M60 general purpose machine gun features a 100 shot belt, fires both fully automatic and semiautomatic, has long range, has 7 spare belts of 7.62mm NATO ammunition and takes 8 seconds to reload.
										The M60 machine gun was designed in the late 1940's based on the German MG42. The M60 was adopted by the US military in 1950. The longer reload time reflects the time it takes to let barrel cool down and the awkward barrel change as well as the general poor reliability of the M60.
RPD/Type 56 LMG	100	FA	2	M	Long	7	12	1	Russia	The RPD light machine gun features a 100 shot drum, fires fully automatic only, has long range, has 7 spare drums of 7.62mm M1943 Soviet ammunition and takes 12 seconds to reload.
										The RPD was the standard light machine gun of

										1Soviet army since the early 1950s till the 1960s. It was widely exported to many pro-Soviet countries and regimes around the world. The Chinese made a copy called the Type 56 LMG. The longer reload time reflects time it takes to let the barrel cool down.
RPK LMG	40	FA	2	M	Long	9	6	1	Russia	The RPK light machine gun features a 40 shot box, fires fully automatic only, has long range, has 9 spare boxes of 7.62mm M1943 Soviet ammunition and takes 6 seconds to reload.
										The RPK became the standard issue LMG of the Red Army from the early 1960's. The RPK is an AK assault rifle modified with a sturdier receiver, a heavier and longer, non detachable barrel, and a re-contoured wooden stock. The non detachable, folding bi-pod is mounted under the muzzle. The longer reload time reflects time it takes to let the barrel cool down.
RPK 74 LMG	45	FA,SA	2	600	Long	8	8	1/1	Russia	The RPK-74 light machine gun features a 45 shot Magazine, fires both fully automatic and semiautomatic, has long range, has 8 spare Magazines of 5.45mm Russian ammunition and takes 8 seconds to reload.
										The RPK-74 is the standard issue light machine gun of the Soviet/Russian army since the late 1970's. It is the LMG version of the AK74 combat rifle. The longer reload time reflects time it takes to let the barrel cool down and then change.
M1919A4 MMG	250	FA	2	500	Long	4	12	2	USA	The M1919A4 medium machine gun features a 250 shot magazine, fires fully automatic only, has long range, has 4 spare boxes of .30inch M1906 ammunition and takes 12 seconds to reload.
										The Browning Machine Guns were adopted by the US Military as the M1917. The 1919A4 was virtually the standard US medium machine gun

# November 8, 2013 [USER GUIDE FOR SATR CODE V1.6A+]

										of WWII.
M-1918A2 BAR	20	FA	2	450	Long	15	4	2	USA	T1he BAR automatic rifle features a 20 shot ma6gazine, fires fully automatic only, has long rang3e, has 15 spare .30inch M1906 ammunition and takes 4 seconds to reload.
										The M1918A2 BAR filled a Squad Automatic Weapon role with the US troops during WWII and later in the Korean War. The limited 20 round magazine meant it was under powered as a Light Machine Gun.
Maxim MG08 MMG	250	250 FA 2 450 Long 4 12 1		1	1 Germa ny	The Maxim Medium Machine Gun features a 250 shot belt, fires fully automatic only, has long range, has 4 spare belts of 7.92 Mauser ammunition and takes 12 seconds to reload.				
										The Maxim was widely used in WWI by the German Army. It was a heavy duty water cooled machine gun capable of long and sustained fire. But it was very heavy.
Degtyarev DP LMG	IG 47 FA 2 600 Long 10 8 6		6	6 Russia	The Degtyarev Light Machine Gun features a 47 shot drum, fires fully automatic only, has long range, has 8 belts of 7.62mm Soviet ammunition and takes 10 seconds to reload.					
										Adopted by the Red Army in 1928 it remained the Soviet Union's standard issue LMG until the 1950's. The DP and the DPM (Modernized) LMG's were widely exported to Soviet-friendly countries.
DShK M1938 HMG	50	FA	2	550	Long	9	4	3	Russia	The DShK M1938 Heavy Machine Gun features a 50 shot belt, fires fully automatic only, has long range, has 9 belts of 12.7mm Soviet ammunition and takes 4 seconds to reload.
										This was the standard issue heavy machine gun in the Soviet Union throughout WWII. And was also widely used in the Korean war. After WWII, the weapon was widely distributed to Warsaw Pact countries. The 12.7mm (.50) AP bullets used can pierce 15mm armor plate at

										500yards.
Lewis Mk1 LMG	47	FA	2	550	Mediu m	10	12	2	UK	The Lewis Light Machine Gun features a 47 shot pan, fires fully automatic only, has medium range, has 10 belts of .303in British ammunition and takes 12 seconds to reload.  The Lewis gun was the first light machine gun used extensively in war. It saw action throughout WWI and some saw action in WWII with the British Army. A careful reload process is required to avoid accidental discharge and frequent stoppages are reflected in its long reload time.
Bren MkII LMG	30	FA	2	500	Long	11	8	2	UK	The Bren Light Machine Gun features a 30 shot magazine, fires fully automatic only, has long range, has 11 magazines of .303inch British ammunition and takes 8 seconds to reload.  The designation BREN stands for (BRno-ENfield). Manufacture of the Bren Mk.1 began in Enfield in the United Kingdom in 1937. The Bren was widely used by Commonwealth countries.
Vickers Mk 1 MMG	250	FA	2	450	Long	4	10	2	UK	The Vickers Medium Machine Gun features a 250 shot belt, fires fully automatic only, has long range, has 4 belts of .303inch British ammunition and takes 10 seconds to reload.  This machine gun was adopted by the British army in 1912 and remained the standard support fire machine gun until the mid 1960's. It is a heavy slow firing weapon that proved very reliable. The water cooled barrel ensured a long barrel life.
MG42 LMG	50	FA	2	M	Long	9	8	2	Germa ny	The MG42 Light Machine Gun features a 50 shot belt, fires fully automatic only, has long range, has 9 belts of 7.92 Mauser ammunition and takes 8 seconds to reload.

One of the best machine guns of WWII, it was the standard issue German LMG. Modified versions of the MG42 are today still in production.

Reload time on Machine Gun takes into account barrel cool down. Most machine guns have low recoil values reflecting their usual mounting on a bipod or tripod.

## 5 Appendix – Recommend Weapon Emulations by Model

Battlefield Sports recommends that gamers are restricted in what they configure their gaming gun too. It's important to retain game balance and the principle of what you see is what you get is maintained. Certain Live Plays specify particular models and when they do, that takes precedence over this list.

BATTLEFIELD SPORTS' MODEL	ALLOWABLE WEAPONS
SCORPION / COBRA	Scorpion, MP5 (not SD), M-3 Grease Gun, Owen SMG, Sten Mark 2, P38/40, P18, MAT 49-20, MAT 49-32, PPS-43, P90
SPITFIRE	Any Hand Gun, MP5,UZI (preferred),M-3 Grease Gun, Owen SMG, Sten Mark 2, MP38/40, MP18,MAT 49-20, P90
P90	FN P90, MP28-50,PPsch-41
COMMANDO	Commando, Colt Commando, AK47/AKM, M1 Carbine, M2 Carbine, MP-43, MP-44, Stg 44
PULSE RIFLE	Pulse Rifle, M16A2, M16A1 – 1970, M16-1967, M14 Rifle, Simonov Carbine SKS, AK74, M1903 Rifle H&K G3, M1 Garand, Lee-Enfield SMLE, Mosin-Nagant Rifle, Steyr AUG, FN-FAL / L1A1 SLR L85A1-2/SA80, H&K G36, Kar 98K
MORITA SAW	M60, RPD,RPK, RPK 74, M-1918A2 BAR, Degtyarev DP LMG, Lewis Mk1 LMG, Bren MkII LMG Vickers Mk 1 MMG, MG42 LMG
MORITA SNIPER	M24 Sniper Rifle, Dragunov SVD
M16	M16A2, M16A1 – 1970, M16-1967, M14 Rifle
M4	Commando, Colt Commando (preferred), AK47/AKM, M1 Carbine, M2 Carbine, MP-43, MP-44, Stg 44

## 5.1 Quick Emulation Setup

On the Battlefield Sports operated battlefields with hundreds of gaming guns in operation, often more than 100 gamers at a time in a single game, a quick system for specifying suitable weapon emulations is required. This is done after the target reset command is performed on all target gaming guns by using the set weapons/chg weapons commands on the master controller. We set all the handguns to H&KUSP Match, all the submachine guns to P90's, all the rifles to HK G36 and all the machine guns to M60 GPMG.

#### APPENDIX – Wounds Chart 6

When wounds are configured, instead of the unit simply saying dead, the display provides a code showing the type and severity of the wound. This has application for military training operations.

#### **SERIOUS WOUNDS**

- 1 (TO) Single shot to chest punctured lung.
- 2 (TO) Single shot to chest Arterial bleeding.
- 3 (TO) Internal bleeding, no puncture wounds chest discoloured.
- 4 (TO) Puncture entry wound to chest and exit wound in back.
- 5 (TO) Puncture entry wound to abdomen and exit wound in back.
- 6 (TO) Puncture entry wound to chest and no exit wound.
- 7 (TO) Puncture entry wound to abdomen and no exit wound.
- 8 (TO) Puncture entry wound to groin, arterial wound.
- 9 (TO) Puncture entry wound to back, Left kidney area, no exit wound.
- 0 (TO) Puncture entry wound to back, Right Kidney area, exit wound to front.
- 1 (HE) Single shot to Jaw breathing blocked.
- 2 (HE) Single shot to neck Arterial bleeding, breathing difficult.
- 3 (HE) Impact trauma, no puncture wounds, unconscious.
- 4 (HE) Entry wound to neck and exit wound in back.
- 5 (HE) Entry wound to left eye and exit wound to back of head, still breathing.
- 6 (HE) Entry wound to right eye and exit wound to back of head, still breathing.
- 7 (HE) Top of head has entry wound, skull fragments and brain visible. still breathing.
- 8 (HE) Small entry wound to forehead. large exit wound at rear. No breathing.
- 9 (HE) Entry wound at rear of neck, casualty cannot move limbs.
- 0 (HE) Entry wound at front of neck, exit wound at rear, no spinal or arterial damage.
- 1 (LL) Single shot to thigh, femer damage.
- 2 (LL) Single shot to shin, shin damage.
- 3 (LL) Complicate fracture, thigh.

- 4 (LL) Puncture entry wound thigh, exit wound at rear, arterial bleed.
- 5 (LL) Puncture entry wound to knee and exit wound a rear.
- 6 (LL) Puncture entry wound to foot.
- 7 (LL) Puncture entry wound to rear of thigh, exit wound to front, arterial bleed.
- 8 (LL) Puncture entry wound to rear of calf, exit wound to front, arterial bleed.
- 9 (LL) Puncture entry wound to front of thigh, exit wound at knee, arterial bleed.
- 0 (LL) Leg amputated from the knee down.
- 1 (RL) Single shot to thigh, fema damage.
- 2 (RL) Single shot to shin, shin damage.
- 3 (RL) Complicate fracture, thigh.
- 4 (RL) Puncture entry wound thigh, exit wound at rear, arterial bleed.
- 5 (RL) Puncture entry wound to knee and exit wound at rear.
- 6 (RL) Puncture entry wound to foot.
- 7 (RL) Puncture entry wound to rear of thigh, exit wound to front, arterial bleed.
- 8 (RL) Puncture entry wound to rear of calf, exit wound to front, arterial bleed.
- 9 (RL) Puncture entry wound to front of thigh, exit wound at knee, arterial bleed.
- 0 (RL) Leg amputated from the knee down.
- 1 (LA) Single shot to bicep, humerus damage.
- 2 (LA) Single shot to forearm, radius damage.
- 3 (LA) Complicate fracture, single shot to elbow.
- 4 (LA) Puncture entry wound bicep, exit wound, arterial bleed.
- 5 (LA) Hand severed at wrist.
- 6 (LA) Puncture entry wound to shoulder, exit wound.
- 7 (LA) Forearm severed at elbow.
- 8 (LA) Arm severed at shoulder.
- 9 (LA) Puncture wound rear of shoulder, no exit wound,

- 0 (LA) Puncture wound rear of shoulder, exit wound to front.
- 1 (RA) Single shot to bicep, humerus damage.
- 2 (RA) Single shot to forearm, radius damage.
- 3 (RA) Complicate fracture, single shot to elbow.
- 4 (RA) Puncture entry wound bicep, exit wound, arterial bleed.
- 5 (RA) Hand severed at wrist.
- 6 (RA) Puncture entry wound to shoulder, exit wound.
- 7 (RA) Forearm severed at elbow.
- 8 (RA) Arm severed at shoulder.
- 9 (RA) Puncture wound rear of shoulder, no exit wound,
- 0 (RA) Puncture wound rear of shoulder, exit wound to front.

#### **SHOCK**

All the same for each body part, repeat of dehydration, massive blood loss and exhaustion as most likely / on trend in theatre.

- 1 Dehydration
- 2 Massive blood loss
- 3 Exhaustion
- 4 Overheating
- 5 Cold injury
- 6 Witnessed a traumatic experience
- 7 Involved in a traumatic experience
- 8 Exhaustion
- 9 Massive Blood Loss
- 0 Dehydration

#### SUPERFICIAL WOUNDS

- 1 (TO) Single shot flesh wound to left of chest.
- 2 (TO) Single shot flesh wound to right of chest.

- 3 (TO) Single shot flesh wound to right of abdomen.
- 4 (TO) Single shot flesh wound to left of abdomen.
- 5 (TO) Single shot flesh wound to right clavicle.
- 6 (TO) Single shot flesh wound to left clavicle.
- 7 (TO) Flesh wound to chest and abdomen.
- 8 (TO) Single shot flesh wound to lower back.
- 9 (TO) Single shot flesh wound to rear right shoulder.
- 0 (TO) Single shot flesh wound to rear left shoulder.
- 1 (HE) Flesh wound to right cheek.
- 2 (HE) Single shot flesh wound to neck.
- 3 (HE) Impact trauma, conscious.
- 4 (HE) Flesh wound to left cheek.
- 5 (HE) Flesh wound to left ear.
- 6 (HE) Flesh wound to right ear.
- 7 (HE) Flesh wound to top of head.
- 8 (HE) Flesh wound to back of head.
- 9 (HE) Flesh wound to right hand side of jaw.
- 0 (HE) Flesh wound to left hand side of jaw.
- 1 (LL) Single shot to upper thigh, flesh wound.
- 2 (LL) Single shot to shin, flesh wound.
- 3 (LL) Single shot to knee, flesh wound.
- 4 (LL) Single shot to lower thigh, flesh wound.
- 5 (LL) Single shot to toes, flesh wound.
- 6 (LL) Single shot to glute, flesh wound.
- 7 (LL) Single shot to calf, flesh wound.
- 8 (LL) Single shot to heel, flesh wound.

### November 8, 2013 [USER GUIDE FOR SATR CODE V1.6A+]

- 9 (LL) Shot to thigh and calf, flesh wounds.
- 0 (LL) Shot to inner thigh, flesh wound.
- 1 (RL) Single shot to upper thigh, flesh wound.
- 2 (RL) Single shot to shin, flesh wound.
- 3 (RL) Single shot to knee, flesh wound.
- 4 (RL) Single shot to lower thigh, flesh wound.
- 5 (RL) Single shot to toes, flesh wound.
- 6 (RL) Single shot to glute, flesh wound.
- 7 (RL) Single shot to calf, flesh wound.
- 8 (RL) Single shot to heel, flesh wound.
- 9 (RL) Shot to thigh and calf, flesh wounds.
- 0 (RL) Shot to inner thigh, flesh wound.
- 1 (LA) Single shot to bicep, flesh wound.
- 2 (LA) Single shot to forearm, flesh wound.
- 3 (LA) Single shot to elbow, flesh wound.
- 4 (LA) Single shot to shoulder, flesh wound.
- 5 (LA) Single shot to hand, forefinger severed.
- 6 (LA) Single shot to hand, flesh wound.
- 7 (LA) Single shot to wrist, flesh wound.
- 8 (LA) Single shot to tricep, flesh wound.
- 9 (LA) Single shot to shoulder, through and through, flesh wound.
- 0 (LA) Shots to forearm and bicep, flesh wound.
- 1 (RA) Single shot to bicep, flesh wound.
- 2 (RA) Single shot to forearm, flesh wound.
- 3 (RA) Single shot to elbow, flesh wound.

- 4 (RA) Single shot to shoulder, flesh wound.
- 5 (RA) Single shot to hand, forefinger severed.
- 6 (RA) Single shot to hand, flesh wound.
- 7 (RA) Single shot to wrist, flesh wound.
- 8 (RA) Single shot to tricep, flesh wound.
- 9 (RA) Single shot to shoulder, through and through, flesh wound.
- 0 (RA) Shots to forearm and bicep, flesh wound.

### TROUBLE SHOOTING

### 7.1 A Gaming Gun will not hit another one! (BATTLE/GAME)

- The first thing to check is to make sure both the shooting gaming gun and the target gaming gun are on the same "Battle" (the term "Game" is used with Laser Tag sound effects). SATR is designed to allow one battle/game to be isolated from another battle/game so that radio and infrared messages between battles/games is prevented. Four separate battles/games are supported. By default Battle/Game 1 is used.
- To check what battle the gaming gun is set on:
  - If the gaming guns are in ready state, check the far ride side of the 3<sup>rd</sup> line to verify the gaming gun is one the correct battle (usually "1") and have the right team settings (X for friendly fire on or A/B for team settings. Remember don't mix friendly fire on with team settings and if using team settings much sure each gaming gun is on a different team)
  - Turn the gaming gun off, then on again with the key.
  - Pull the trigger and then look at the display
  - As the gun says "mission start" the display will show on the first line "countdown" and on the second line "battle 1." If this "battle 2" or "battle 3" or "battle 4" you are on the wrong battle.

To return the gaming gun back to Battle 1:

OPTION 1: Use the Set Battle function on the master controller

OPTION 2: Use the Target Reset function on the master controller to reset all the settings except language but including battle back to factory defaults. This will turn on friendly fire.

OPTION 3: Use the menus accessible upon initial boot through the right button (black) and scroll through to "Battle" and change this value to 1.

## 7.2 A Gaming Gun will not hit another one! (FRIENDLY FIRE OFF)

Often friendly fire is turned off by assigning gaming guns to teams. The result is a gaming gun on team A cannot hit another gaming gun on team A, similarly for team B. Gaming guns not assigned to a team do not work properly with gaming guns assigned to a team.

Assigning gaming guns to teams is common practice and recommended for most civilian groups. However the referees need to be careful that they have assigned the gaming guns to the right team. When in doubt check the LCD while the gaming gun is in ready state. The last character on the 3<sup>rd</sup> line indicates the team (A means team A, B means teams B and X means not assigned to a team). The best way to assign gaming guns to teams is to move each team into their form up position and then use the Set/Chq Team functions on the master controller to configure each team independently. It is recommended the team function be set before each game in case the gamers have changed gaming gun during the break.

Instead of the master controller, teams can be also be configured during the initial boot process. Use the right button immediately after turning the gaming gun on with the key and then scroll through the menus using the trigger until you get to "Battle Modes". Then use the left or right

buttons to select the right team or indeed turn friendly fire on before using the trigger to work through the rest of the menu options.

### 7.3 A Gaming Gun will not hit another one! (FLAT BATTERY)

The next thing to check is IF the battery is flat. Remember new gaming guns come with unconditioned batteries which must be conditioned before use. Conditioning involves performing a complete charge, discharge and full charge again.

To check the current voltage turn the gaming gun on with the key to see to voltage displayed on the 3<sup>rd</sup> line.

The gaming guns should work to down till around 5.5V. If the voltage is low, the LCD turns off.

If the gaming guns get too low, simply connect the gaming gun on the charger. Remember the maximum power for recharging is 1amp.

### 7.4 A Gaming Gun will not hit another one! (DON'T KNOW WHY!)

There can be a few causes for this.

Use the target reset function on the Master Controller to shoot all gaming guns and then re-try; this will correct any software settings that may cause the gaming gun not to take hits.

The first thing to check is to make sure both the shooting gun and the target gun are on the same "Battle".

Gaming guns on a different battle cannot be hit or hit another gaming gun in a different battle

The next thing to check is that all the gaming guns are configured as "Friendly Fire ON" (see 6.2 above). It is a good idea to use the sensor test function on the master controller to ensure the target gaming gun is accepting infrared messages.

Make sure also the shooting gaming gun has a well zeroed scope. If all else fails turn the gaming gun off, wait, then on again and see if it fixes the problem.

If all of the above fails to fix the problem, then try changing the head sensor with one from your spares kit.

### My Master Controller radio functions have no effect.

The most likely reason for this is the Master Controller is configured to be on a different battle/game to the gaming guns. Reboot the gaming gun and go through the menus access by the mode button to change the battle to the same as the target gaming guns.

### The hit light can be seen but is dim all the time

This means there is moisture in the sensor. However this should not cause any problem, the sensor will continue to work normally in all other respects. The dim light will disappear when the sensor has chance to dry.

#### We used 2 way radios that had been rented and the hit feedback hardly worked

This is most likely due to using a radio that intrudes into the same frequency as SATR uses for the hit feedback. Radio systems near the 433mhz band should not be used when SATR is being used in the same vicinity. SATR is very RF friendly to other devices, if the channel is busy, it will not transmit and therefore all radio functions including hit feedback will cease. Infrared functions like shooting will continue to work without the hit feedback.

#### The LCD is blank yet the gaming gun appears to be working?

This nearly always means the battery is running flat. The LCD will be the first thing to stop functioning when the battery is low.

### My gaming gun will not toggle between automatic and semi-automatic fire

This is usually because the weapon emulation chosen does not support two modes of fire, refer to APPENDIX A - SATR Weapon Chart.

#### My gaming gun re-boots sometimes during play

This means there is some fault with the power supply, the gaming gun main board is not getting continuous power. Check all connections and if needed try replacing the battery.

#### What are the recommended range settings? 7.5

The range of a gaming gun is determined by the range configured by the user and also the type of lens assembly used. A lens with a long focal length such as found on the Morita model, causes the beam be tightly focused increasing the range but making it necessary for the shooter to be more accurate. The diameter of the lens impacts the amount of infrared light collected by the lens and re-focused into a beam.

Gaming Gun Model	Lens assembly	Range Effect	Beam width
Morita Sniper or SAW	50mm lens with 165mm focal length	Very long	Narrow
M16 and M4	Some M16 & M4 use the same lens as the Morita model, however the most commonly they have 50mm lens & a 100mm focal length	Long	Standard
Pulse Rifle	50mm lens with 100mm focal length	Long	Standard
Commando 2004 edition	50mm lens with 165mm focal length	Very Long	Narrow
Commando 2005 - 2012	50mm lens with 100mm focal length	Long	Standard
Commando 2013+ edition	46mm with 165mm focal length	Very Long	Narrow
Scorpion	40mm lens with 100mm focal length	Medium	Standard
Spitfire 2009+ edition	40mm lens with 100mm focal length	Medium	Standard
Spitfire 2002-2008	25mm lens with 75mm focal length	Short	Wide

The software settings establish how much current flow goes to the infrared LED -- the more current; the longer its range. The range categories in ascending power are indoor (set by using the indoor mode), short, medium and long. To minimise infrared bounce and sometimes to provide game balance between different weapons, ranges other than long are sometimes appropriate.

Spitfires built before 2009, should use the range override to set them to long range in all conditions except tight indoor settings.

Terrain	Recommend range settings
Indoor with line of sight generally less than 30 metres	Indoor (except Spitfire 2002-2008 use short)
Indoor with line of sight over 30 metres	Short
Jungle, medium forest and dense forest	Weapon Defaults
Light Forest, open or outdoor urban	Long

### 7.6 How do I zero my Gaming Gun?

Battlefield Sports recommends that each gaming gun needs to be zeroed once per week. SATR requires the scope to be better zeroed then the classic system so that the sensor receives a clear error free digital signal.

Zeroing is best done with an infrared camera connected to a black/white monitor. A target sheet showing the distance above the beam the red dot or cross hair should be located is available for download from the online BFSU. The most important thing to take into account is that the scope is above the lens assembly where the infrared beam comes out, therefore the scope must be zeroed to be this distance above the beam and when a gamer is aiming they also need to aim this much above the sensor.

### 7.7 Common Error Codes

Error Code	Error
101	Failed to initialise SD Card
102	SD card disabled
106	RF module Error
108	RF Module Error
201	RF Module Error
T.O	RF Chip timeout

## 8 Glossary

0 010336	41 y
Term	Definition
A Zeroed gaming gun	A gun that shoots accurately on first trigger pull when correctly aimed. The gun is hitting the target indicated by the Red Dot or Cross Hair scopes by aiming above the sensors the same distance the lens is below the scope
AO	Area of Operation. This has a military term and can be used in situations where it is clearly explained to the customer or where the group is familiar with the term – this is the area of play bounded by defined boundaries
Battlefield LIVE	Live combat simulation game directed at Teen and adult gamers & Corporate events.
Beginner's LIVE-Play	Introductory mission that has simple objectives and rules with lots of re-spawns
<b>BFSU</b>	Battlefield Sports University. This is online and is password protected for access by field owners.
Check list	A list of equipment, materials and/or actions required on a post for the staff member to check off each time it is done to ensure nothing is missed
Clan War	Tournament played for trophies and/or prizes aimed at veteran players (those who have played more than 20 times)
Configuring a Gaming Gun	Using the display to set up a gun with various "lives", "sounds" and delays (refer to the Equipment Handling Procedure)
Death Match	This is a session where players make up two teams. There are Unlimited re-spawns & a set time. The team with the least number of re-spawns WINS!
Family Fun Session	A session for primary school aged children and their Parents, or carers, played in 15 minute game increments
Hit	A hit is when a player's sensors are hit by another player's fire. It registers an "ouch" each time and reduces the hit point counter by 1
Laser Skirmish	A brand of outdoor army games of 15 minute duration run for Primary School age children's birthday parties & their parents
Laser Tag	A more sci-fi theme aimed at home birthday parties and Vacation Care events or any politically sensitive group. Do not use the terms "shooting" or "combat" or "gaming gun" when dealing with a Laser Tag event.
Live-Play	The script for a live action scenario, including mission objectives, descriptions of scenes, conceptual situation maps and props (such as which gaming guns will be used), and if relevant, team backgrounds. Live-Play is a combination of theme and plot usually with specific mission objectives for the teams involved. A typical Live-Play includes victory conditions, suitable terrain, length of game, hit points, respawns and sometimes special rules and weapons.
Live-Play Briefing	The C.O. briefs the gamers on gaming gun operation, safety rules, and the missions to be played in a particular session.
Live-Play C.O.	A C.O. stands for Commanding Officer, this is a trained Staff Member who oversees operations from the time of leaving the warehouse to return to the warehouse and which is for under 100 players and up to 3 other Staff
LMG	Short for "light machine gun", generally air cooled machine guns that can be carried and utilized at the squad level by infantry. LMG's are usually bipod mounted. LMG's are prone to overheating and therefore cannot sustain continuous fire for extended periods.
Private Session	This is a session strictly for the client and their guests and is at a time and place of their determination
Public Session	A site where regular games are scheduled & held at regular and fixed times and open for several different groups to book into
Referee or N.C.O	N.C.O. stands for Non-Commissioned Officer - a trained or in training, staff member who assists the C.O. run the event
Re-spawn	This is a function by a referee in the session whereby a player's hit points are restored by use of a special gun or key. After re-spawning, a player can continue the game and in a Death Match it is the number of re-spawnings which determines the game outcome. The lower number of re-spawnings is the winner
Veteran	A gamer who has played more than 20 times. These guys are generally not allowed to book into a "Beginners" session, otherwise they will smash the newbies.

# 9 Laser Tag Terminology

In SATR different terms are used on the display and also on spoken sound effects when the sound scheme is set to "Laser Tag". Here is how to translate between normal modes and Laser Tag modes.

Standard Term	Laser Tag Alternative
Shoot	Tag
Kill	Deactivate
Dead Already	Deactivated Already
Weapon	Phaser
Submachine gun	Small Phaser
Rifle	Medium Phaser
Hand Gun	Tiny Phaser
Machinegun	Large Phaser
Spawn	Reactivate
Gun	Phaser
Firing	Tagging
Dead	Deactivated
Wound	Tagged
Hit	Tag
Battle	Game
Mission	Game
Reloading	Charging
Magazine	Charge
Reload	Charge
Gaming Gun	Phaser
READY DISPLAY LETTERS	
Н	T
K	D
A (top line)	С

# 10 WEEE Regulations & Recycling

Discarded electric appliances are recyclable and should not be discarded in domestic waste. Please actively support us in conserving resources and protecting the environment by returning this applicant to collect centers, if available.

